

LANSEN

Wireless M-BUS Gateway5 configuration manual for
LTE-M1 or CAT1/4G

*using optional
LansenConfigurator*

Introduction	4
MQTT traffic	4
Packet sent by gateway with wM-Bus container	5
Sending configuration packets to a gateway	7
Alternative 1: M-BUS header for encrypted and non-encrypted configuration packets.....	7
Alternative 2: M-BUS header only for non-encrypted configuration data.	8
The response from the gateway	9
Short Status packet	10
Status packet.....	12
Ready-for-conf packet.....	17
Indications of a gateway	18
Visual and sound indications during startup sequence of a gateway.....	18
Visual Indications	18
Connection sequence to MQTT for uploading data (battery gateway)	19
Connection sequence to MQTT for uploading data (mains gateway)	19
Notes regarding SIM-card and PIN.....	20
Notes regarding gateway antennas	20
Power consumption	20
Battery lifetime (battery gateway).....	21
Using program Lansen Configurator for configuration of the gateway.....	23
Access Password	23
Access Groups	23
Connect to the gateway over wM-Bus interface using Lansen USB-dongle.....	24
Connect to the gateway over MQTT interface using Lansen Configurator	26
Connect to the gateway using a USB to USB-C cable (wired)	28
Configuration settings for a gateway	30
Settings in the gateway.....	31
Basic-tab.....	31
Encryption	31
MBUS mode	32
Min install RSSI	32
Antenna	33
Timers-tab	33
Listen timers.....	33
Start time schedule	33
Monthly reading start time	34
Suppression timer	35
Global suppression timer	35

Internal suppression timer	35
Routing-tab.....	37
Accept Manufacturer ID.....	37
Route messages.....	37
Meters-tab	38
Clock-tab	41
Bridge-tab.....	41
MQTT settings	42
NTP	42
MQTT always online	42
Certificates	43
Firmware upgrade.....	43
Check routed messages with Packet Sniffer V2	44
Overview of the Sniffer	44
Sniffer options	44
Autoscroll	44
Filter Meters.....	44
Filter Routed By.....	45
Only Latest Data	45
Clear All	45
Primary list	45
Secondary list	46
Meters	46
Routed By	47
Columns.....	48
Keys	49
Logging data to file.....	49

Introduction

- This device from Lansen is a lightweight gateway that is made for receiving wM-Bus data and transmit the data using LTE M1 or CAT1/4G, depending on variant, to an MQTT server.
- The data received is timestamped and once connection to the MQTT service is active the data is transmitted to the specified MQTT server.
- To maintain full data integrity, the dataflow through the gateway is NOT decrypted. No encryption keys for the dataflow are stored in the gateway, however, the configuration of the gateway can be protected using a unique AES128 encryption key which is preprogrammed into the gateway during production. This ONLY protects the configuration data.
- Packets are sent with Quality of Service (QoS) set to 0, i.e., the MQTT server should not reply on messages. TCP/IP is handling transmission, ACK, and quality of service automatically.
- The gateway can be configured over the wM-Bus interface using, for example, a Lansen USB-dongle (LAN-WMBUS-D1/D2-TC), through a USB-C cable, a wM-Bus compatible transceiver, or via the MQTT interface.
- The gateway can run either on mains power or battery.
- The gateway support in-field upgrade of the firmware. The upgrade can be requested by the MQTT or wM-Bus interface.

MQTT traffic

This document describes how to interpret data packages from a gateway which support Message Queueing Telemetry Transport (MQTT).

Note: The number 01234567 below is an example of a serial number for a gateway.

Data is posted from the gateway on topic **LAS/W/D/01234567**.

Configuration to the gateway should be posted on topic **LAS/W/C/01234567**.

Response of configuration from the gateway are posted on topic **LAS/W/R/01234567**.

Gateway ready to accept configuration data is posted on topic **LAS/W/I/01234567**.

Packets are sent with Quality of Service (QoS) set to 0, i.e., the MQTT server should not reply on message. TCP/IP is handling transmission, ACK, and QoS, automatically.

If connection is lost, data is stored on the gateway in its flash memory. This is also the case for battery driven devices.

If connection is lost during a transmission the gateway will resend the not yet delivered telegram to the server once connection is active again.

Below is an example packet as sent from the gateway where wM-Bus data is in **blue** and the MQTT header is in **red**. The received WMBUS packet in **yellow**.

```
30 A0 01 00 10 4C 41 53 2F 57 2F 44 2F 30 30 30 34 36 31 35 33 68 88 88 68 08 FD 72 97 42 04 00 33 30 0B 32 58 00 00 00 0C 78 53 61 04 00 06
6D 58 84 95 DE 26 5B 01 FD 71 A3 8C 40 78 97 42 04 00 81 40 FD F1 94 74 00 0D FD 3B 55 54 44 33 30 97 42 04 00 0B 32 7A C4 00 00 40 2F 2F
04 FD 3A D3 C4 00 00 82 40 FD 3A 1E 01 02 FD 0F 95 00 81 80 40 FD 3A 00 84 C0 40 FD 3A A6 99 00 00 42 FD 3A 19 00 82 01 FD 3A 87 05 C1 01
FD 3A 7F 82 02 FD 3A E0 01 06 6D 1A 04 95 DE 26 00 02 FD 46 0B 0D B2 16
```

Packet sent by gateway with wM-Bus container

The data is packed into a wM-Bus container data record which is represented by the table below.

Example packet complete MQTT packet:

Information					
DR1	Represents the time when package was received				
DR2	Represents the signal strength for the reception of the received package Note: Interpret the value using two's complement.				
DR3	If packet was from a repeater the repeater serial number is written here, otherwise this value is 0xFFFFFFFF				
DR4	RSSI value that the repeater received the packet. Relative RSSI 0-100, 0 is the best and 100 is the worst. 0xFF means the value is not used.				
DR5	Wireless M-Bus data received.				
Byte No.	Field Name	Content	Info	Byte data (example)	Layer
1	Start	Start-byte		0x68	Data Link
2	L-Field	Telegram length	If packet is longer than 255 then both L-fields should be added, otherwise the L-fields are the same.	0x45	
3	L-field	Telegram length		0x45	
4	Start	Start-byte		0x68	
5	C-Field	ACC-DMD		0x08	
6	A-Field	Primary addressing	0xFD = Use secondary addressing	0xFD	
7	CI-Field	Long header (0x72)		0x72	Transport
8	ID-Field	Identification number (LSB)	Example: 33221100	0x00	
9	ID-Field	Identification number		0x11	
10	ID-Field	Identification number		0x22	
11	ID-Field	Identification number (MSB)		0x33	
12	Manufacturer	Manufacturer code (LSB)	LAS	0x33	
13	Manufacturer	Manufacturer code (MSB)		0x30	
14	Version	Version		0x07	
15	Type	Device type		0x1B	
16	Acc.	Access number		0x01	
17	Status	Errors and alerts		0x00	
18	Config.	Configuration field	Example: Encryption off	0x00	
19	Config.	Configuration field		0x00	
20	ID-Field	DIF	8-digit BCD	0x0C	Application
21	ID-Field	VIF	Fabrication number	0x78	
22	ID-Field	Gateway serial number (LSB)	Example: 00000008	0x08	
23	ID-Field	Gateway serial number		0x00	
24	ID-Field	Gateway serial number		0x00	
25	ID-Field	Gateway serial number (MSB)		0x00	
26	DR1	DIF	48-bit integer	0x06	
27	DR1	VIF	Time Type I format	0x6D	
28	DR1	Received time (LSB)	Example: 2000-01-01 00:01:02	0x02	
29	DR1	Received time		0x01	
30	DR1	Received time		0xC0	
31	DR1	Received time		0x01	
32	DR1	Received time		0x01	
33	DR1	Received time (MSB)		0x00	
34	DR2	DIF	8-bit integer	0x01	
35	DR2	VIF	Extension	0xFD	

36	DR2	VIF	RSSI	0x71	
37	DR2	Value	Example: 118	0x76	
38	DR3	DIF	8 digit BCD	0x8C	Application
39	DR3	DIFE	Subunit 1	0x40	
40	DR3	VIF	Fabrication number	0x78	
41	DR3	Repeater serial number (LSB)	Example: 00000009	0x09	
42	DR3	Repeater serial number		0x00	
43	DR3	Repeater serial number		0x00	
44	DR3	Repeater serial number (MSB)		0x00	
45	DR4	DIF	8-bit integer	0x81	
46	DR4	DIFE	Subunit 1	0x40	
47	DR4	VIF	Extension	0xFD	
48	DR4	VIFE	RSSI	0xF1	
49	DR4	VIFE	Relative deviation	0x94	
50	DR4	VIFE	Multiplier (0.01)	0x74	
51	DR4	Value	RSSI of repeater (0-100%) Note: 0xFF = Not used Example: 70	0x46	
52	DR5	DIF	Variable length	0x0D	
53	DR5	VIF	Extension	0xFD	
54	DR5	VIFE	Data container for wireless M-Bus protocol	0x3B	
55	DR5	LVAR	Example: 50	0x32	
56	DR5	Telegram content starting with the L-field in the contained wireless MBUS packet		0x8C	
57		
58	DR5	Last byte of the telegram	0x06		
59	Checksum			0x	Data Link
60	Stop-byte			0x16	

Sending configuration packets to a gateway

This chapter describes how to send configuration packets to a gateway. The packet is always sent to the topic LAS/W/C/12345678 where 12345678 is the serial number of the gateway.

Note: Alternative 1 needs to be used if a gateway has been enabled to only accept encrypted configuration packets.

Alternative 1: M-BUS header for encrypted and non-encrypted configuration packets

The following header is supported by the gateway and can be used for sending both AES128 encrypted and non-encrypted configuration packets.

The serial number in bytes 12-15 must be the serial number of the gateway that should be configured, i.e., the same serial number that is in the MQTT configuration header.

The access number, byte 20, should be incremented by 1 for each packet sent to the gateway for optimal security. However, it will still work even if the same access number is always used.

Note: After the header, the configuration data is added – The configuration data is also referred to as ENAPI Data. Configuration of the gateway is sent in the same way both on the MQTT as with the dongle. An NDA is required to receive the commands and the structure.

Byte No.	Field Name	Content	Info	Byte data (example)	Layer
1	L-Field	Length of data			Data Link
2	C-Field	SND-UD2		0x43	
3	M-Field	Meter Manufacturer Code	LAS	0x33	
4	M-Field	Meter Manufacturer Code		0x68	
5	A-Field	Serial number BCD (LSB)	Example: 0A0A0A0A	0x0A	
6	A-Field	Serial number BCD		0x0A	
7	A-Field	Serial number BCD		0x0A	
8	A-Field	Serial number BCD (MSB)		0x0A	
9	A-Field	Version	Example: 00	0x00	
10	A-Field	Device type	Example: 00	0x00	
11	CI-Field	Long network header		0x5B	Transport
12	Ident Nr.	Gateway serial number BCD (LSB)	Example: 12345678	0x78	
13	Ident Nr.	Gateway serial number BCD		0x56	
14	Ident Nr.	Gateway serial number BCD		0x34	
15	Ident Nr.	Gateway serial number BCD (MSB)		0x12	
16	Manufacturer	Manufacturer code (LSB)	LAS	0x33	
17	Manufacturer	Manufacturer code (MSB)		0x30	
18	Version	Version (Ignored by gateway)	This can be set to any value	0xFF	
19	Device type	Device type (Ignored by gateway)	This can be set to any value	0xFF	
20	Access number.	Access Number to gateway		0x75	
21	Status	Errors and alerts		0x00	
22	Config.	Configuration field	Example: Encryption off	0x00	
23	Config.	Configuration field		0x00	
24	AES-verify	Encryption verification		0x2F	
25	AES-verify	Encryption verification		0x2F	

Alternative 2: M-BUS header only for non-encrypted configuration data.

This format is easier, compared to previous alternative, but only supports non-encrypted configuration data. The Access number, byte 12, should be incremented by 1 for each packet sent to the gateway for best security. However, it will still work even if the same access number is always used.

Note: After the header, the configuration data is added – The configuration data is also referred to as ENAPI Data. Refer document **Bridge_ENAPI_Commands_B4** for detailed instruction about each ENAPI command. Configuration of the gateway is sent in the same way both on the MQTT as with the dongle. An NDA is required to receive the commands and the structure.

Byte No	Field Name	Content	Info	Byte data (example)	Layer
1	L-Field	Length of data			Data Link
2	C-Field	SND-NR		0x44	
3	M-Field	Meter Manufacturer Code	LAS	0x33	
4	M-Field	Meter Manufacturer Code		0x30	
5	A-Field	Serial number BCD (LSB)	Example: 0A0A0A0A	0x0A	
6	A-Field	Serial number BCD		0x0A	
7	A-Field	Serial number BCD		0x0A	
8	A-Field	Serial number BCD (MSB)		0x0A	
9	A-Field	Version		0x00	
10	A-Field	Device type		0x00	
11	CI-Field	Short network header		0x7A	Transport
12	Access no.	Access Number		0xA1	
13	Status	Errors and alerts		0x00	
14	Configuration		Example: Encryption off	0x00	
15	Configuration			0x00	
16	AES-verify	Encryption verification		0x2F	
17	AES-verify	Encryption verification		0x2F	

The response from the gateway

The packet is always sent to the topic LAS/W/R/12345678 where 12345678 is the serial number of the gateway.

Note: After the header, the configuration data is added – The configuration data is also referred to as ENAPI Data. Refer document **Bridge_ENAPI_Commands_B4** for detailed instruction about each ENAPI command.

Byte No	Field Name	Content		Byte data	
1	L-Field	Length of data		0x	Data Link
2	C-Field	RSP-UD		0x08	
3	M-Field	Meter Manufacturer code (LAS)		0x33	
4	M-Field	Meter Manufacturer code (LAS)		0x30	
5	A-Field	Serial NO LSB (BCD)		0x78	
6	A-Field	Serial NO (BCD)		0x56	
7	A-Field	Serial NO (BCD)		0x34	
8	A-Field	Serial NO MSB (BCD) of GW		0x12	
9	A-Field	Version		0x0A	
10	A-Field	Device type		0x31	
11	CI-Field	Short transport header		0x7A	Transport
12	Access No.	Access number of gateway		0x75	
13	Status	Meter state (Low battery)	Example: Low battery	0x04	
14	Config Field			0x00	
15	Config Field			0x00	
16	AES-Verify	Encryption verification		0x2F	
17	AES-Verify	Encryption verification		0x2F	

Short Status packet

The packet is always sent to the topic LAS/W/S/12345678 where 12345678 is the serial number of the gateway.

A short status packet contains information and settings about the gateway and the packet is sent at regular intervals.

In other words, a short status packet is sent:

- Every 12 hours over the MQTT interface.
- On every new connection to the MQTT server.

Note: Information in DR1 – DR8 below are the same as for the repeater.					
DR1	Software version of gateway				
DR2	Revision of the gateway modem				
DR3	Hardware model				
DR4	Hardware version				
DR5	Current battery level. Battery level is always 3600 for battery version and 5000 for mains version				
DR6	Number of seconds for which the modem has been active				
DR7	Timestamp for last change done on the gateway configuration				
DR8	Timestamp for last change done on the gateway meter list				
Byte No.	Field Name	Content	Info	Byte data (example)	Layer
1	Start	Start-byte		0x68	Data Link
2	L-Field	Telegram length	If packet is longer than 255 then both L-fields should be added, otherwise the L-fields are the same.	0x45	
3	L-field	Telegram length		0x45	
4	Start	Start-byte		0x68	
5	C-Field	SND_NR		0x44	
6	A-Field	Primary addressing	0xFD = Use secondary addressing	0xFD	
7	CI-Field	Long header (0x72)		0x72	Transport
8	ID-Field	Identification number (LSB)	Example: 33221100	0x00	
9	ID-Field	Identification number		0x11	
10	ID-Field	Identification number		0x22	
11	ID-Field	Identification number (MSB)		0x33	
12	Manufacturer	Manufacturer code (LSB)	LAS	0x33	
13	Manufacturer	Manufacturer code (MSB)		0x30	
14	Version	Version		0x07	
15	Type	Device type		0x1B	
16	Acc.	Access number		0x01	
17	Status	Errors and alerts	Example: Low battery	0x04	
18	Config.	Configuration field	Example: Encryption off	0x00	
19	Config.	Configuration field		0x00	
20	DR1	DIF	16-bit integer	0x02	Version of the gateway
21	DR1	VIF	Extension table	0xFD	
22	DR1	VIFE	Version	0x0F	
23	DR1	Value (LSB)	Example: 120 (0x0078)	0x78	
24	DR1	Value (MSB)		0x00	
25	DR2	DIF	Variable Length	0xCD	Revision of the Modem
26	DR2	DIFE	Storage 11	0x05	
27	DR2	VIF	Extension table	0xFD	
28	DR2	VIFE	Dimensionless	0x3A	
29	DR2	LVAR	Modem revision string length (10-35 bytes)	0x11	
30	DR2	Revision Ascii string (LSB)		0x32	

31	DR2	Revision Ascii string		0x33	
32	DR2	Revision Ascii string		0x37	
33	DR2	Revision Ascii string		0x34	
34	DR2	Revision Ascii string		0x42	
35	DR2	Revision Ascii string		0x30	
36	DR2	Revision Ascii string		0x31	
37	DR2	Revision Ascii string	Example: 2374B01SIM767XM5A	0x53	
38	DR2	Revision Ascii string		0x49	
39	DR2	Revision Ascii string		0x4D	
40	DR2	Revision Ascii string		0x37	
41	DR2	Revision Ascii string		0x36	
42	DR2	Revision Ascii string		0x37	
43	DR2	Revision Ascii string		0x58	
44	DR2	Revision Ascii string		0x4D	
45	DR2	Revision Ascii string		0x35	
46	DR2	Revision Ascii string MSB		0x41	
47	DR3	DIF	8-bit integer	0x01	Hardware model
48	DR3	VIF	Extension table	0xFD	
49	DR3	VIFE	Model version	0x0C	
50	DR3	Value	Example: 0x01	0x01	
51	DR4	DIF	8-bit integer	0x01	Hardware version
52	DR4	VIF	Extension table	0xFD	
53	DR4	VIFE	Hardware version	0x0D	
54	DR4	Value	Example: 0x01	0x01	
55	DR5	DIF	16-bit integer	0x02	Current battery level
56	DR5	DIFE	Extension table	0xFD	
57	DR5	VIF	Voltage (mV)	0x46	
58	DR5	Value (LSB)	Example: 3600 (0x0E10)	0x10	
59	DR5	Value (MSB)		0x0E	
60	DR6	DIF	32-bit integer	0x04	Number of seconds for which the modem has been active
61	DR6	VIF	Operating time seconds	0x24	
62	DR6	Value (LSB)	Example: 9173511 seconds	0x07	
63	DR6	Value		0xFA	
64	DR6	Value		0x8B	
65	DR6	Value (MSB)		0x00	
66	DR7	DIF	32-bit integer		Timestamp for configuration
67	DR7	VIF	Timestamps in seconds for last change of the configuration		
68	DR7	Value (LSB)	Example: 1737368574 seconds		
69	DR7	Value			
70	DR7	Value			
71	DR7	Value (MSB)			
72	DR8	DIF	32-bit integer		
73	DR8	VIF	Timestamps in seconds for last change of the meter list		
74	DR8	Value (LSB)	Example: 1737368575 seconds		
75	DR8	Value			
76	DR8	Value			
77	DR8	Value (MSB)			

Status packet

A status packet contains information and settings about the gateway and the packet is sent at regular intervals.

In other words, a status packet is sent:

- Every 12 hours over the MQTT interface.
- On every new connection to the MQTT server.
- Every minute over the wM-Bus interface (default in C mode, frame format A).

Note: Information in DR1 – DR24 below are the same as for the repeater.	
DR1	Total number of packets transmitted over MQTT since power up
DR2	Used routing slots (maximum 2000) used (whitelist devices).
DR3	Software version of gateway
DR4	Is the bridge listening now? (1=Yes, 0=NO)
DR5	Seconds to mode change (Listen→Sleep or Sleep→Listen). Maximum 32767 seconds
DR6	Value on parameter “Listen timer”
DR7	Value on parameter “Pause timer” (0=The gateway will always listen)
DR8	Shows which weekday(s) the gateway is listening. See Table 1 for more information
DR9	Value on parameter “Start time”, shown as minutes after midnight (-1=Not used)
DR10	Current time
DR11	Current battery level. Battery level is always 3600 for battery version and 5000 for mains version
DR12	IMEI number
DR13	ICCID number of SIM-card number
DR14	RSSI in the LTE M1 network (connection between the gateway and the base station)
DR15	Hardware model
DR16	Hardware version
DR17	On time (days) since powerup
DR18	Number of seconds for which the modem has been active
DR19	Number of seconds for which the wM-Bus radio has been in listen mode
DR20	Shows which weekday(s) the gateway will upload data. See Table 1 for more information Note: Has no function if parameter <i>MQTT Always Online</i> is enabled.
DR21	The time for which the modem will upload stored data, shown as minutes after midnight (-1=Not used) Note: Has no function if parameter <i>MQTT Always Online</i> is enabled.
DR22	The interval for which the modem will upload data. Maximum 1440 minutes (24 hours). Can be combined with days to upload data (see DR20).
DR23	Number of NTP server connection retries since last successful NTP connection.
DR24	Shows which month/day(s) the gateway will upload data. Note: Has no function if parameter <i>MQTT Always Online</i> is enabled.
DR25	Shows which week the gateway will upload data. 1 = Every week, 2 = Every other week, 3 = Every third week etc. Note: Has no function if parameter <i>MQTT Always Online</i> is enabled.
DR26	Shows which month/days(s) the gateway is listening.

Byte No.	Field Name	Content	Info	Byte data (example)	Layer
1	Start	Start-byte	If packet is longer than 255 then both L-fields should be added, otherwise the L-fields are the same.	0x68	Data Link
2	L-Field	Telegram length		0x45	
3	L-field	Telegram length		0x45	
4	Start	Start-byte	0xFD = Use secondary addressing	0x68	
5	C-Field	SND_NR		0x44	
6	A-Field	Primary addressing		0xFD	
7	CI-Field	Long header (0x72)	Example: 33221100	0x72	Transport
8	ID-Field	Identification number (LSB)		0x00	
9	ID-Field	Identification number		0x11	
10	ID-Field	Identification number		0x22	

11	ID-Field	Identification number (MSB)		0x33		
12	Manufacturer	Manufacturer code (LSB)	LAS	0x33		
13	Manufacturer	Manufacturer code (MSB)		0x30		
14	Version	Version		0x07		
15	Type	Device type		0x1B		
16	Acc.	Access number		0x01		
17	Status	Errors and alerts	Example: Low battery	0x04		
18	Config.	Configuration field	Example: Encryption off	0x00		
19	Config.	Configuration field		0x00		
20	ID-Field	DIF	8-digit BCD	0x0C		
21	ID-Field	VIF	Fabrication number	0x78		
22	ID-Field	Gateway serial number (LSB)	Example: 00000008	0x08		
23	ID-Field	Gateway serial number		0x00		
24	ID-Field	Gateway serial number		0x00		
25	ID-Field	Gateway serial number (MSB)		0x00		
26	DR1	DIF	32-bit integer	0x04	Number of total packets transmitted over MQTT since power up	
27	DR1	VIF	Extension table	0xFD		
28	DR1	VIFE	Dimensionless	0x3A		
29	DR1	Value (LSB)	Example: 65793 (0x010101)	0x01		
31	DR1	Value		0x01		
32	DR1	Value		0x01		
33	DR1	Value (MSB)		0x00		
34	DR2	DIF	16-bit integer + Extension	0x82	Used routing slots	
35	DR2	DIFE	Subunit 1	0x40		
36	DR2	VIF	Extension table	0xFD		
37	DR2	VIFE	Dimensionless	0x3A		
38	DR2	Value (LSB)	Example: 521 (0x0209)	0x09		
39	DR2	Value (MSB)		0x02		
40	DR3	DIF	16-bit integer	0x02	Software version of gateway	
41	DR3	VIF	Extension table	0xFD		
42	DR3	VIFE	Version	0x0F		
43	DR3	Value (LSB)	Example: 120 (0x0078)	0x78		
44	DR3	Value (MSB)		0x00		
45	DR4	DIF	8-bit integer + Extension	0x81	Is the bridge listening now? (1=Yes, 0=NO)	
46	DR4	DIFE	Subunit 2	0x80		
47	DR4	DIFE	Subunit 2	0x40		
48	DR4	VIF	Extension table	0xFD		
49	DR4	VIFE	Dimensionless	0x3A		
50	DR4	Value	Example: Yes (0x01)	0x01	Seconds to mode change	
51	DR5	DIF	32-bit integer + Extension	0x84		
52	DR5	DIFE	Subunit 3	0xC0		
53	DR5	DIFE	Subunit 3	0x40		
54	DR5	VIF	Extension table	0xFD		
55	DR5	VIFE	Dimensionless	0x3A		
56	DR5	Value (LSB)	Example: 5803 (0x000016AB)	0xAB		
57	DR5	Value		0x16		
58	DR5	Value		0x00		
59	DR5	Value (MSB)		0x00		
60	DR6	DIF	16-bit integer + Storage 1	0x42	Value on parameter "Listen timer"	Application
61	DR6	VIF	Extension table	0xFD		
62	DR6	VIFE	Dimensionless	0x3A		
63	DR6	Value (LSB)	Example: 20 (0x0014)	0x14		
64	DR6	Value (MSB)		0x00		
65	DR7	DIF	16-bit integer + Extension	0x82		Application
66	DR7	DIFE	Storage 2	0x01		

67	DR7	VIF	Extension table	0xFD	Value on parameter “Pause timer”	Application
68	DR7	VIFE	Dimensionless	0x3A		
69	DR7	Value (LSB)	Example: 1420 (0x058C)	0x8C		
70	DR7	Value (MSB)		0x05		
71	DR8	DIF	8-bit integer + Storage + Extension	0xC1	Which weekdays the gateway is listening	
72	DR8	DIFE	Storage 3	0x01		
73	DR8	VIF	Extension table	0xFD		
74	DR8	VIFE	Dimensionless	0x3A		
75	DR8	Value	Example: Mondays Note: See Table 1 for more info.	0x02		
76	DR9	DIF	16-bit integer + Extension	0x82	Value on parameter “Start time”, shown as minutes after midnight	
77	DR9	DIFE	Storage 4	0x02		
78	DR9	VIF	Extension table	0xFD		
79	DR9	VIFE	Dimensionless	0x3A		
80	DR9	Value (LSB)	Example: 10:01 (0x0259)	0x59		
81	DR9	Value (MSB)		0x02		
82	DR10	DIF	48-bit integer	0x06	Current time	
83	DR10	VIF	Time Type I format	0x6D		
84	DR10	Current Time	Example: 2001-0101 00:01:02	0x02		
85	DR10	Current Time		0x01		
86	DR10	Current Time		0xC0		
87	DR10	Current Time		0x01		
88	DR10	Current Time		0x01		
89	DR10	Current Time		0x00		
90	DR11	DIF	16-bit integer	0x02	Current battery level	
91	DR11	DIFE	Extension table	0xFD		
92	DR11	VIF	Voltage (mV)	0x46		
93	DR11	Value (LSB)	Example: 3600 (0x0E10)	0x10		
94	DR11	Value (MSB)		0x0E		
95	DR12	DIF	Variable Length	0xCD	IMEI number	
96	DR12	DIFE	Storage 5	0x02		
97	DR12	VIFE	Extension table	0xFD		
98	DR12	VIF	Dimensionless	0x3A		
99	DR12	LVAR	IMEI string length (15 bytes)	0x0F		
100	DR12	IMEI Ascii string (LSB)	Example: 012345678901234	0x34		
101	DR12	IMEI Ascii string		0x33		
102	DR12	IMEI Ascii string		0x32		
103	DR12	IMEI Ascii string		0x31		
104	DR12	IMEI Ascii string		0x30		
105	DR12	IMEI Ascii string		0x39		
106	DR12	IMEI Ascii string		0x38		
107	DR12	IMEI Ascii string		0x37		
108	DR12	IMEI Ascii string		0x36		
109	DR12	IMEI Ascii string		0x35		
110	DR12	IMEI Ascii string		0x34		
111	DR12	IMEI Ascii string		0x33		
112	DR12	IMEI Ascii string		0x32		
113	DR12	IMEI Ascii string		0x31		
114	DR12	IMEI Ascii string (MSB)		0x30		
115	DR13	DIF	Variable Length	0x8D	ICCID number of SIM-card number	Application
116	DR13	DIFE	Storage 6	0x03		
117	DR13	VIF	Extension table	0xFD		
118	DR13	VIFE	Dimensionless	0x3A		
119	DR13	LVAR	ICCID string length (19-20 bytes)	0x14		

120	DR13	ICCID Ascii string (LSB)	Example: 01234567890123456789	0x39		
121	DR13	ICCID Ascii string		0x38		
122	DR13	ICCID Ascii string		0x37		
123	DR13	ICCID Ascii string		0x36		
124	DR13	ICCID Ascii string		0x35		
125	DR13	ICCID Ascii string		0x34		
126	DR13	ICCID Ascii string		0x33		
127	DR13	ICCID Ascii string		0x32		
128	DR13	ICCID Ascii string		0x31		
129	DR13	ICCID Ascii string		0x30		
130	DR13	ICCID Ascii string		0x39		
131	DR13	ICCID Ascii string		0x38		
132	DR13	ICCID Ascii string		0x37		
133	DR13	ICCID Ascii string		0x36		
134	DR13	ICCID Ascii string		0x35		
135	DR13	ICCID Ascii string		0x34		
136	DR13	ICCID Ascii string		0x33		
137	DR13	ICCID Ascii string		0x32		
138	DR13	ICCID Ascii string		0x31		
139	DR13	ICCID Ascii string (MSB)		0x30		
140	DR14	DIF	8-bit integer	0x01	RSSI in the LTE M1 network	
141	DR14	VIF	Extension table	0xFD		
142	DR14	VIFE	RSSI	0x71		
143	DR14	Value	Example: -71 Note: Calculate this value as two's (2's) complement	0xB9		
144	DR15	DIF	8-bit integer	0x01	Hardware model	
145	DR15	VIF	Extension table	0xFD		
146	DR15	VIFE	Model version	0x0C		
147	DR15	Value	Example: 0x01	0x01		
148	DR16	DIF	8-bit integer	0x01	Hardware version	
149	DR16	VIF	Extension table	0xFD		
150	DR16	VIFE	Hardware version	0x0D		
151	DR16	Value	Example: 0x01	0x01		
152	DR17	DIF	16-bit integer	0x02	On time (days) since powerup	
153	DR17	VIF	On time days	0x23		
154	DR17	Value (LSB)	Example: 2051	0x03		
155	DR17	Value (MSB)		0x08		
156	DR18	DIF	32-bit integer	0x04	Number of seconds for which the modem has been active	
157	DR18	VIF	Operating time seconds	0x24		
158	DR18	Value (LSB)	Example: 9173511 seconds (0x008BFA07)	0x07		
159	DR18	Value		0xFA		
160	DR18	Value		0x8B		
161	DR18	Value (MSB)		0x00		
162	DR19	DIF	32-bit integer + Extension	0x84	Number of seconds for which the wM-Bus radio has been in listen mode	
163	DR19	DIFE	Subunit 1	0x40		
164	DR19	VIF	Operating time seconds	0x24		
165	DR19	Value (LSB)	Example: 9173511 seconds (0x008BFA07)	0x07		
166	DR19	Value		0xFA		
167	DR19	Value		0x8B		
168	DR19	Value (MSB)		0x00		
169	DR20	DIF	8-bit integer + Storage + Extension	0xC1	Shows which weekday(s)	
170	DR20	DIFE	Storage 7	0x03		
171	DR20	VIF	Extension table	0xFD		

172	DR20	VIFE	Dimensionless	0x3A	gateway will upload data
173	DR20	Value	Example: Monday + Wednesday Note: Refer to Table 1 .	0x0A	
174	DR21	DIF	16-bit integer + Extension	0x82	The time for which the modem will upload stored data, shown as minutes after midnight
175	DR21	DIFE	Storage 8	0x04	
176	DR21	VIF	Extension table	0xFD	
177	DR21	VIFE	Dimensionless	0x3A	
178	DR21	Value (LSB)	Example: 00:30	0x1E	
179	DR21	Value (MSB)		0x00	
180	DR22	DIF	16-bit integer + Extension + storage	0xC2	The interval for which the modem will upload data
181	DR22	DIFE	Storage 9	0x04	
182	DR22	VIF	Extension table	0xFD	
183	DR22	VIFE	Dimensionless	0x3A	
184	DR22	Value (LSB)	Example: 30 minutes	0x1E	
185	DR22	Value (MSB)		0x00	
186	DR23	DIF	16-bit integer + Extension	0x82	Number of NTP server connection retries since last successful NTP connection
187	DR23	DIFE	Storage 10	0x05	
188	DR23	VIF	Extension table	0xFD	
189	DR23	VIFE	Dimensionless	0x3A	
190	DR23	Value (LSB)	Example: 5	0x05	
191	DR23	Value (MSB)		0x00	
192	DR24	DIF	32-bit integer + Extension	0xC4	Shows which month day(s) gateway will upload data
193	DR24	DIFE	Storage 11	0x05	
194	DR24	VIF	Extension table	0xFD	
195	DR24	VIFE	Dimensionless	0x3A	
196	DR24	Value (LSB)	Example: First day of the month	0x01	
197	DR24	Value		0x00	
198	DR24	Value		0x00	
199	DR24	Value (MSB)		0x00	
200	DR25	DIF	8-bit integer + Storage + Extension	0x81	Shows which weeks gateway will upload data
201	DR25	DIFE	Storage 12	0x06	
202	DR25	VIF	Extension table	0xFD	
203	DR25	VIFE	Dimensionless	0x3A	
204	DR25	Value	Example: Every week	0x01	
205	DR26	DIF	32-bit integer + Extension	0x84	Which month days the gateway is listening
206	DR26	DIFE	Storage 12	0x06	
207	DR26	VIF	Extension table	0xFD	
208	DR26	VIFE	Dimensionless	0x3A	
209	DR26	Value (LSB)	Example: First day of the month	0x01	
210	DR26	Value		0x00	
211	DR26	Value		0x00	
212	DR26	Value (MSB)		0x00	

Table 1: Bit representation for days when gateway is listening

Bit	Info
0 (0x01)	Sunday
1 (0x02)	Monday
2 (0x04)	Tuesday
3 (0x08)	Wednesday
4 (0x10)	Thursday
5 (0x20)	Friday
6 (0x40)	Saturday
7 (0x80)	NOT USED

Ready-for-conf packet

The *Ready-for-conf* packet is sent from the device every time upload of data from gateway is finished to MQTT. This indicates that the gateway is ready for configuration via MQTT.

The packet is always sent to the topic **LAS/W/I/12345678** where 12345678 is the serial number of the gateway.

Byte No.	Field Name	Content	Info	Byte data (example)	Layer
1	Start	Start-byte		0x68	Data Link
2	L-Field	Telegram length	If packet is longer than 255 then both L-fields should be added, otherwise the L-fields are the same.	0x45	
3	L-field	Telegram length		0x45	
4	Start	Start-byte		0x68	
5	C-Field	SND_NR		0x44	
6	A-Field	Primary addressing	0xFD = Use secondary addressing	0xFD	
7	CI-Field	Long header (0x72)		0x72	Transport
8	ID-Field	Identification number (LSB)	Example: 33221100	0x00	
9	ID-Field	Identification number		0x11	
10	ID-Field	Identification number		0x22	
11	ID-Field	Identification number (MSB)		0x33	
12	Manufacturer	Manufacturer code (LSB)	LAS	0x33	
13	Manufacturer	Manufacturer code (MSB)		0x30	
14	Version	Version		0x07	
15	Type	Device type		0x1B	
16	Acc.	Access number		0x01	
17	Status	Errors and alerts	Example: Low battery	0x04	
18	Config.	Configuration field	Example: Encryption off	0x00	
19	Config.	Configuration field		0x00	

Indications of a gateway

The device can use both visual indications (LED) and sound indications to show what is currently happening, e.g., how the startup sequence is going or if there are any errors after startup.

Visual and sound indications during startup sequence of a gateway

Start by powering on the device. The following will occur during startup:

- 1 The LED strip (all 4 LED's) will light up, accompanied by a beep.
- 2 When the internal flash memory is cleared, the device beeps a second time, the IP-COM LED turns off and the wM-Bus LED will start flashing, indicating it is listening for incoming wM-Bus data. This also indicates that the startup sequence is completed. During the first 3-4 minutes after the startup sequence is complete, the device accepts configuration data, for example, by using a Lansen configuration dongle (LAN-WMBUS-D1/D2-TC).
- 3 1-2 minutes after the starting sequence is finished the modem tries to connect to the MQTT server using the settings in the device, this is indicated by the IP-COM LED beginning to blink.

Visual Indications

A gateway use LEDs to indicate different things, see table below.

LED Strip (red circle)			
POWER	Green	Steady on	The device has power.
		Blinking 2 times/second	Low battery
POWER INFO wM-Bus IP-COM	Green Red Red Red	All steady on	Startup sequence active.
INFO	Red	Steady on	wM-Bus radio on/listen for radio packets.
wM-Bus	Red	Quick flash	New packet received by the wM-Bus radio.
IP-COM	Red	Steady on	Active connection to the MQTT server.
		Blinking	Modem active but not connected to the MQTT Server.
Cellular network LED (red arrow)			
Red	Flash every 300 ms (0.3 s)		The device is sending data.
Red	Steady on/Off + Flash every 300 ms (0.3 s) in intervals.		Not registered to a network, rebooting, attempting to connect to a network.

Note: For battery version the LED indication will be turned off after 30 minutes to save power. The indication will be active again for 30 minutes if waking the device using a magnet.

Connection sequence to MQTT for uploading data (battery gateway)

This chapter describes the connection sequence for a battery-operated gateway.

Note: The setting '*Always connected to MQTT*' must not be set on a battery-operated gateway!

- 1 Modem is started and immediately searches for an LTE M1 or CAT1/4G network, this can be seen on the IP-COM LED which will start to flash.
- 2 When an LTE-M1 or CAT1/4G network is found, the APN server is retrieved from the network and stored in a temporary memory.
- 3 The modem then connects to the NTP server as specified by the customer.
The default NTP server is pool.ntp.org unless it has been changed.
- 4 The modem then tries to connect to the MQTT server.
- 5 If connection is successful, then the red IP-COM LED will turn on fully, the NET LED starts blinking every 0.3s and the gateway starts uploading all stored meter data in its internal flash memory to the MQTT server.
- 6 When the upload is complete, the gateway register itself to receive configuration data from the MQTT server using address LAN/W/C/01234567, where 01234567 is the ID number of the gateway.
- 7 Once ready to receive configuration data, the gateway will listen to incoming MQTT configuration data by default for 30 seconds.
It's possible to extend this time by sending a command to the gateway. Refer to the section **Connecting and working with Lansen Configurator (Battery Gateway)** to change configuration time.
- 8 Once configuration time is up, the gateway turns off the modem completely and waits until it is time to upload data again.

Connection sequence to MQTT for uploading data (mains gateway)

This chapter describes the connection sequence for a mains-operated gateway. In this example, the setting '*Always connected to MQTT*' is set to be active.

- 1 Modem is started and immediately searches for an LTE M1 or CAT1/4G network, this can be seen on the IP-COM LED which will start to flash.
- 2 When an LTE-M1 or CAT1/4G network is found, the APN server is retrieved from the network and stored in a temporary memory.
- 3 The modem then connects to the NTP server as specified by the customer.
The default NTP server is pool.ntp.org unless it has been changed.
- 4 The modem then tries to connect to the MQTT server.
- 5 If connection is successful, then the red IP-COM LED will turn on fully, the gateway starts uploading all stored meter data in its internal flash memory to the MQTT server and you can see the NET LED blinking every 0.3s.
- 6 When upload is complete, the gateway register itself to receive configuration data from the MQTT server using address LAN/W/C/01234567, where 01234567 is the ID number of the gateway.
- 7 Since the setting '*Always connected to MQTT*' is active, the gateway will keep the connection to the MQTT server active and transmit data immediately when it is picked up on the wM-Bus radio interface. The configuration interface will also be active all the time so that configuration can be made using the MQTT interface.

Notes regarding SIM-card and PIN

The device support nano SIM-cards and eSIM. If eSIM is required then the SIM must be mounted during production, thus must be ordered in advance.

The SIM card must not have any PIN code, thus the PIN must be inactivated.

For improved security, the SIM-card should be locked to the specific modem using the network provider webservice or similar. There is usually also an option to lock the SIM-card to the first device it is powered up in.

Notes regarding gateway antennas

Different variants of the device come with different setups of the antennas, where it uses either internal or external antennas on either the wM-Bus or MQTT interface. Typical device name is as below where X1 and X2 is present if the external antenna interface is used. If not present, then the internal antenna is used instead.

LAN	-	WMBUS	-	GW5	-	BE/M	-	LR	-	A1/A2	-	(X1)	-	CATM1	-	(X2)
														CAT1/4G		
Manufacturer		Input		Device		BE: Battery M: Mains		LR: Long Range		A1: IP40 A2: IP65		<u>Optional</u> External antenna for input (WMBUS)		Output		<u>Optional</u> External antenna for output (CATM1)

Additional information regarding antennas on the gateway:

- The gateway uses one broadband antenna to cover all LTE-M1 or CAT1/4G bands, either with internal or external antenna.
- If the internal input (wM-Bus) is used, then two internal antennas are used for maximum range in all direction. The wM-Bus radio listens using one antenna at a time and change antenna every 25-35 seconds.

Power consumption

The device has four main power consumption modes with a typical consumption as seen in the table below.

Mode	Current consumption
Sleeping, only the time clock is running.	20 uA
Radio for wM-Bus active and receiving data.	12 mA
Modem is active and transmitting data.	150 mA
Modem is on idle, waiting for configuration data.	24 mA
Battery leakage	760 mAh

Note: The status packet contains some information about how much time a device has spent in different modes. Note that all timers reset to 0 on power cycle.

- 1) Total on time since powerup
- 2) Total active time for the radio (wM-BUS)
- 3) Total Time modem has been on.

Battery lifetime (battery gateway)

Since the battery driven gateway has a large super capacitor to assist the battery, it is hard to measure the true battery voltage to determine the service life left on the device. One method to determine the lifetime to get an early warning is by using calculations based on how long the device has spent in the different modes as defined in chapter **Power consumption**.

Note: The total battery capacity of the battery is 38000 mAh.

EXAMPLE

The device has been running for 1 year and we want to know the remaining lifetime with the same usage as the first year. The settings and the total time in different modes of the device has been as follows:

Setting:

- Modem uploads data every day.
- Radio (wM-Bus) active 15 minutes/day.
- Total on time since powerup 365 days.
- Radio (wM-Bus) active 328500 seconds (15 minutes per day for 365 days).
- Modem active 21900 seconds (one minutes per day for 365 days).

To get the power consumption for each mode, the equation below is used.

$$powerConsumption = timeInSeconds \cdot currentConsumption$$

Sleeping mode power consumption:

Total on time since powerup is 365 days. Convert this to seconds as below.

$$timeInSeconds = 365 \text{ days} \cdot 24 \text{ h/day} \cdot 60 \text{ min/h} \cdot 60 \text{ sec/m} = 31\,536\,000 \text{ s}$$

The current consumption, according to chapter **Power consumption**, when the device is sleeping, is 20 uA. Inserting the time calculated above with the power consumption in the first equation gives:

$$totalPowerConsumption = 31\,536\,000 \text{ s} \cdot 20 \mu\text{A} = 630\,720\,000 \mu\text{As} = 630\,720 \text{ mAs}$$

Convert this value to mAh by dividing the result by 3600.

$$consumptionSleeping = \frac{630\,720 \text{ mAs}}{3600} = 175.2 \text{ mAh}$$

Radio (wM-Bus) active power consumption:

Total time is already in seconds so we can calculate the total power consumption immediately since the power consumption when radio is active is 12 mA, according to chapter **Power consumption**.

$$totalPowerConsumption = 328\,500 \text{ s} \cdot 12 \text{ mA} = 3\,942\,000 \text{ mAs}$$

Convert this value to mAh by dividing the result by 3600.

$$consumptionRadio = \frac{3\,942\,000 \text{ mAs}}{3600} = 1095 \text{ mAh}$$

Modem active power consumption

Total time is already in seconds so we can calculate the total power consumption immediately since the power consumption when radio is active is 160 mA, according to chapter **Power consumption**.

$$totalPowerConsumption = 21900 \text{ s} \cdot 160 \text{ mA} = 3\,504\,000 \text{ mAs}$$

Convert this value to mAh by dividing the result by 3600.

$$consumptionModem = \frac{3\,504\,000 \text{ mAs}}{3600} = 973.3 \text{ mAh}$$

Battery leakage:

The battery leakage is given as 760 mAh, according to chapter **Power consumption**.

Total consumption year 1:

$$\begin{aligned} totalPowerConsumption &= consumptionSleeping + consumptionRadio + consumptionModem + batteryLeakage \\ &= 175 + 1095 + 973 + 760 = 3\,003 \text{ mAh} \end{aligned}$$

Therefore, the device has used 3003 mAh in one year. This means that the currently available capacity left is:

$$availableCapacity = 38000 \text{ mAh} - 3003 \text{ mAh} = 34997 \text{ mAh}$$

To get expected lifetime left, we take the above calculation and divide by the *totalPowerConsumption* after a year.

$$expectedLifetime = availableCapacity / totalPowerConsumption = 34997 \text{ mAh} / 3003 \text{ mAh} = 11.65 \text{ years}$$

Using program Lansen Configurator for configuration of the gateway

The Lansen Configurator can be used to configure the gateway via the 868 MHz wM-Bus interface with a Lansen configuration dongle (LAN-WMBUS-D1/D2-TC), directly via the MQTT server, or using a USB-C wire directly inserted into the gateway.

Note: To configure the device via the MQTT server, the device must first be connected to the MQTT server which requires all MQTT settings to be set correctly.

Access Password

An Access password is needed to get access to device settings once a connection has been done. There are 3 different customizable passwords that determine the level of access to the device. These passwords can be found on www.lansenonline.com.

After 15 minutes of inactivity, you have to login with your password again unless you are logged in through MQTT. You can change password 1-3 in the tab "Change access password".

Current access

Change access password

Current access groups: None

Access password:

Login

Current access

Change access password

Old access password:

New access password: Access password 1 ▾

Change

Access Groups

Access groups determine which groups of parameters you are permitted to access in LansenConfigurator. Each password can be freely configurable to have access to one or several "Access groups".

Should you attempt to alter a parameter not included by your access group you will receive a popup letting you know which access group you need.

If you are logging in with MQTT you will instantly be granted all access groups without the need of a password.

Current access

Change access password

Current access groups: 1, 2, 3

Access password:

Login


Connect to the gateway over wM-Bus interface using Lansen USB-dongle

To connect to the gateway using a Lansen configuration dongle (LAN-WMBUS-D1/D2-TC), perform the steps below.


Select the Type 'Dongle' and click Connect.

If the program fails to connect to the dongle, try to select the com-port manually by changing the field from 'Auto' to the com-port of the dongle.

If the program still fails, it might be that the computer has failed to download the correct driver. In this case, visit our webpage (<http://www.lansen.io/download/>) and download the corresponding driver for the dongle you have.

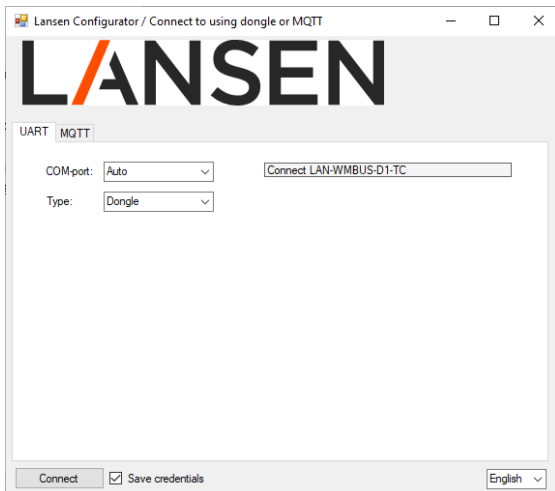

The below window is shown once the connection to the dongle is successful.

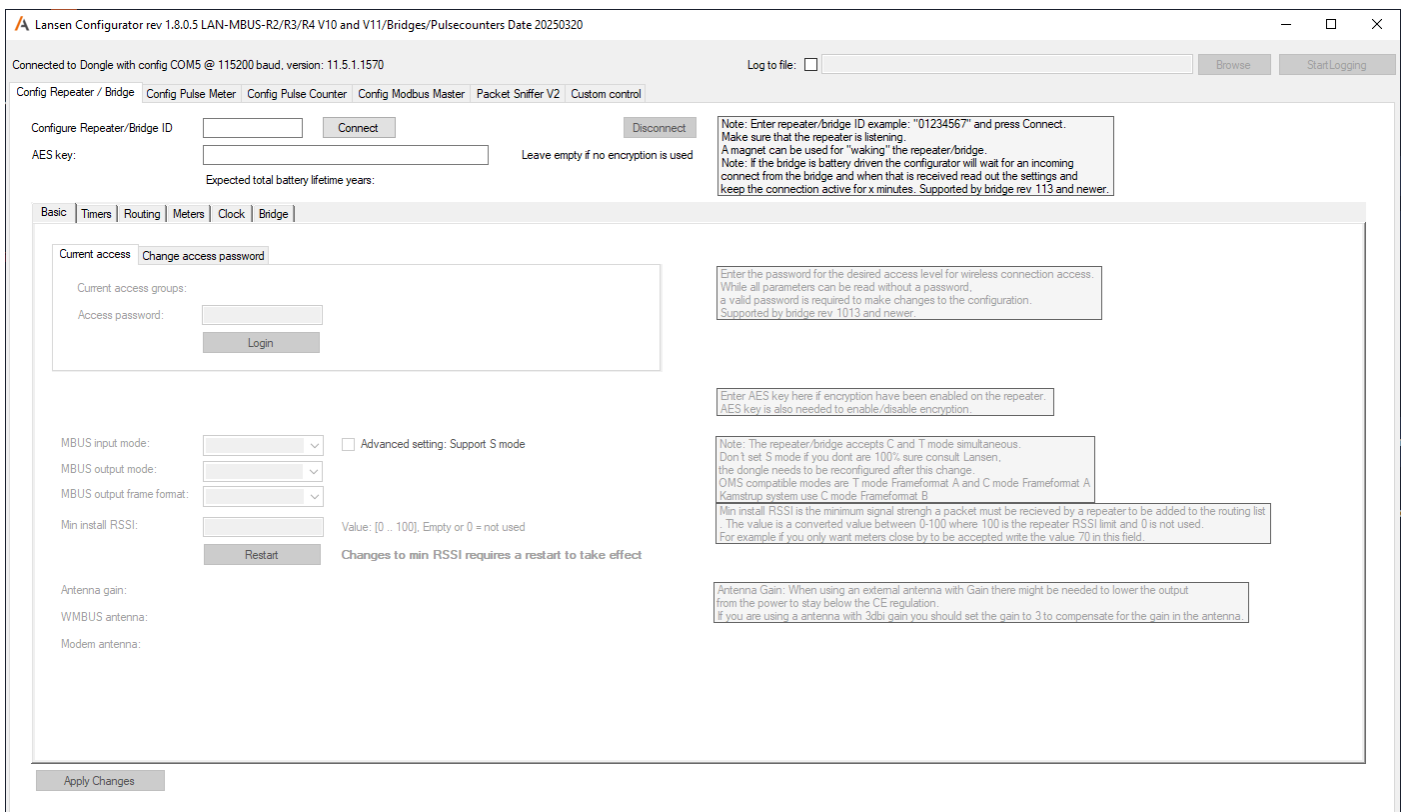

In the sniffer tab, Packet Sniffer V2, you can see all devices in the area as picked up by the dongle.

Lansen configurator rev 1.2.0.0 LAN-MBUS-R2/R3/R4 V10 and V11/Bridges/Pulsecounters date 20220616

Connected to Dongle with config COM43 @ 115200 baud, version: 11.5.0.1544

Log to file:

Config Repeater | Config Pulse Meter | Config Pulse Counter | Config Modbus Master | **Packet Sniffer V2** | Custom control

Id	Time	RSSI	Length	Man (LLA)	Serial (LLA)	Ver (LLA)	Type (LLA)	Last routed by (RP)	Hop (RP)	RX state (RP)	Time to change (RP)	Relative RSSI (RP)
84	2023-02-06 13:50:48:468	-46	47	AAA	00000257	07h	Room sensor					
85	2023-02-06 13:50:49:291	-57	79	LAS	04002246	03h	Carbon dioxide					
86	2023-02-06 13:50:49:724	-39	47	AAA	00000258	07h	Room sensor					
87	2023-02-06 13:50:50:022	-53	90	LAS	00000007	0Ah	Smoke detector					
88	2023-02-06 13:50:50:289	-42	19	KAM	73003360	04h	Unidirect repeater					
89	2023-02-06 13:50:50:346	-42	63	DME	53732003	41h	Heat outlet					
90	2023-02-06 13:50:50:729	-46	47	AAA	00000259	07h	Room sensor					
91	2023-02-06 13:50:50:941	-82	47	LAS	00079871	09h	Room sensor					
92	2023-02-06 13:50:51:729	-39	47	AAA	00000260	07h	Room sensor					
93	2023-02-06 13:50:51:772	-38	107	LAS	00070194	1Eh	Com controller	00070194	0	True	0	
94	2023-02-06 13:50:51:973	-79	47	LAS	00079877	09h	Room sensor					
95	2023-02-06 13:50:52:053	-84	47	LAS	00079874	09h	Room sensor					
96	2023-02-06 13:50:52:482	-58	90	LAS	00000006	0Ah	Smoke detector					
97	2023-02-06 13:50:52:718	-46	47	AAA	00000261	07h	Room sensor					
98	2023-02-06 13:50:53:729	-39	47	AAA	00000262	07h	Room sensor					
99	2023-02-06 13:50:54:718	-46	47	AAA	00000263	07h	Room sensor					
100	2023-02-06 13:50:55:630	-66	31	EGA	00000018	05h	Room sensor					
101	2023-02-06 13:50:55:729	-39	47	AAA	00000264	07h	Room sensor					
102	2023-02-06 13:50:56:727	-46	47	AAA	00000265	07h	Room sensor					
103	2023-02-06 13:50:57:177	-50	31	LAS	03007384	07h	Leakage detector					
104	2023-02-06 13:50:57:735	-39	47	AAA	00000266	07h	Room sensor					
105	2023-02-06 13:50:58:379	-90	31	SEN	30390952	68h	Water					
106	2023-02-06 13:50:58:805	-57	46	LAS	02001964	07h	Room sensor					
107	2023-02-06 13:50:58:971	-46	47	AAA	00000267	07h	Room sensor					
108	2023-02-06 13:50:58:989	-80	47	LAS	00079872	09h	Room sensor					
109	2023-02-06 13:50:59:782	-53	90	LAS	00000007	0Ah	Smoke detector					
110	2023-02-06 13:50:59:977	-39	47	AAA	00000268	07h	Room sensor					
111	2023-02-06 13:51:00:425	-44	37	BMT	15176158	05h	Water					
112	2023-02-06 13:51:00:608	-34	79	HYD	48198072	24h	Cold water					

Autoscroll ☒ Only Latest Data ☐
 Filter Meters ☐ Suspend sniffer
 Filter Routed By ☐ Clear all

Meters Routed By Columns Keys

Filtered	Identity	Type
<input checked="" type="checkbox"/>	AAA00000214	Room sensor
<input type="checkbox"/>	LAS 00000002	Room sensor
<input type="checkbox"/>	AAA00000215	Room sensor
<input type="checkbox"/>	QDS 90540897	Heat CostAL
<input type="checkbox"/>	AAA00000216	Room sensor
<input type="checkbox"/>	EGA 00000017	Room sensor
<input type="checkbox"/>	AAA00000217	Room sensor
<input type="checkbox"/>	AAA00000218	Room sensor
<input type="checkbox"/>	LAS 21212121	Door/window
<input type="checkbox"/>	HYD 48198072	Cold water
<input type="checkbox"/>	AAA00000220	Room sensor
<input type="checkbox"/>	LAS 00000007	Smoke detect
<input type="checkbox"/>	AAA00000221	Room sensor
<input type="checkbox"/>	LAS 00069198	Com controller
<input type="checkbox"/>	AAA00000222	Room sensor
<input type="checkbox"/>	KAM 73003360	Unidirect repe
<input type="checkbox"/>	AAA00000224	Room sensor
<input type="checkbox"/>	LAS 00000001	Unidirect repe
<input type="checkbox"/>	LAS 02001964	Room sensor
<input type="checkbox"/>	AAA00000225	Room sensor
<input type="checkbox"/>	EGA00000022	Room sensor
<input type="checkbox"/>	AAA00000226	Room sensor
<input type="checkbox"/>	AAA00000227	Room sensor
<input type="checkbox"/>	LAS 02001861	Room sensor
<input type="checkbox"/>	AAA00000228	Room sensor
<input type="checkbox"/>	LAS 00101784	Com controller

- To configure a gateway, go to the tab called "Config Repeater / Bridge" and enter the eight serial numbers, visible on the label of the gateway, either on the poke protection or on the front of the device.
- Click 'Connect'. The program will start connecting to the gateway and read out all its data. The process takes 20-60 seconds.
- If the program is unable to connect, make sure that the gateway is not sleeping and that the gateway and dongle are at least 1 meter apart, so the radio signal is not too strong. If the gateway is sleeping, then you can wake the gateway using a magnet to the left of the front label. Then click 'Connect' again.

Connected to Dongle with config COM5 @ 115200 baud, version: 11.5.1.1570

Config Repeater / Bridge | Config Pulse Meter | Config Pulse Counter | Config Modbus Master | **Packet Sniffer V2** | Custom control

Configure Repeater/Bridge ID

AES key: Leave empty if no encryption is used

Expected total battery lifetime years:

If encryption is enabled on the gateway, then a valid AES-key must be entered in the field marked below, when connecting, to change settings. Note that it is always possible to read out all settings without the AES-key except for MQTT settings that will only show the first letter of each setting.

Connected to Dongle with config COM5 @ 115200 baud, version: 11.5.1.1570

Config Repeater / Bridge | Config Pulse Meter | Config Pulse Counter | Config Modbus Master | **Packet Sniffer V2** | Custom control

Configure Repeater/Bridge ID

AES key: Leave empty if no encryption is used

Expected total battery lifetime years:

Connect to the gateway over MQTT interface using Lansen Configurator

Start the Lansen Configurator and select the tab MQTT, as seen below, and enter the settings to the MQTT server to connect. Example settings can be seen in the picture below.

Host: MQTT server address, for example, my.mqtt.server.

Port: Port number to MQTT server. Typical 1883 for non-encrypted connection.

TLS: Enter if TLS should be used in the connection between Lansen Configurator and the MQTT server.

QoS: Typically set to 'At least once (QoS 1)', depending on your MQTT server the value might need to be changed.

Serial: The serial number of the gateway, for example, 01234567.


Username: The username to connect to the MQTT server.

Password: The password to connect to the MQTT server.

.PFX certificate: When connecting to a gateway using certificates you will need to create and upload a PFX file for full access.


.PFX password: When generating a PFX file you will need a password for the file, that password should be added here for the program to access the file.

When everything is filled in, click "Connect".

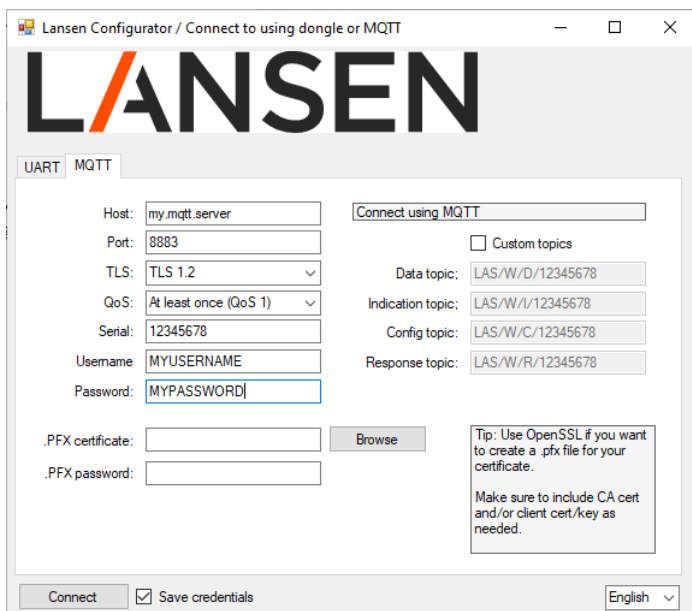

The screenshot shows the 'Lansen Configurator / Connect to using dongle or MQTT' window. The 'MQTT' tab is selected. The 'Host' field contains 'my.mqtt.server', 'Port' is '8883', 'TLS' is 'TLS 1.2', 'QoS' is 'At least once (QoS 1)', 'Serial' is '12345678', 'Username' is 'MYUSERNAME', and 'Password' is 'MYPASSWORD'. The 'Connect using MQTT' section has a 'Custom topics' checkbox and four topic fields: 'Data topic: LAS/W/D/12345678', 'Indication topic: LAS/W/I/12345678', 'Config topic: LAS/W/C/12345678', and 'Response topic: LAS/W/R/12345678'. There are fields for '.PFX certificate' and '.PFX password' with a 'Browse' button. A tip box states: 'Tip: Use OpenSSL if you want to create a .pfx file for your certificate. Make sure to include CA cert and/or client cert/key as needed.' At the bottom, there is a 'Connect' button, a 'Save credentials' checkbox, and a language dropdown set to 'English'.

You are now connected to the MQTT server. In the example below, connection has been made with serial number 99999950 to the MQTT server.

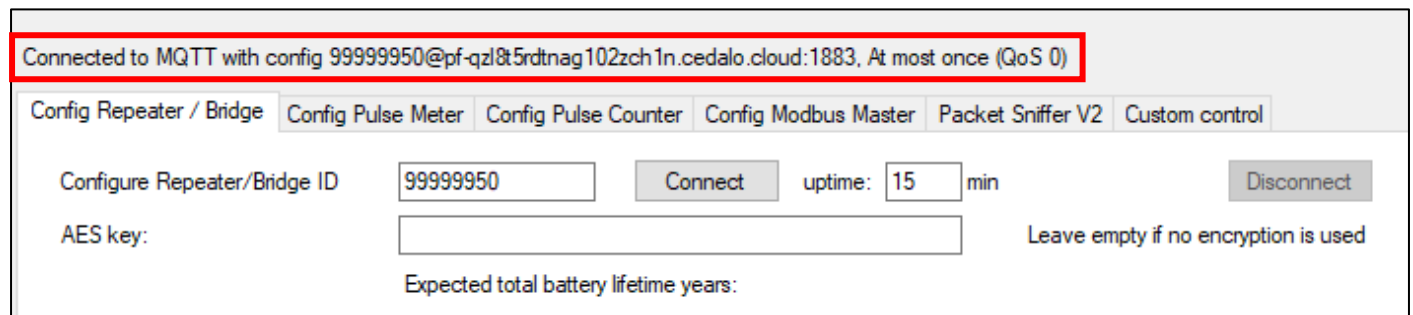

The screenshot shows the main interface of the Lansen Configurator. A red box highlights the status bar at the top, which reads: 'Connected to MQTT with config 99999950@pf-qzl8t5rdtnag102zch1n.cedalo.cloud:1883, At most once (QoS 0)'. Below this, there are tabs for 'Config Repeater / Bridge', 'Config Pulse Meter', 'Config Pulse Counter', 'Config Modbus Master', 'Packet Sniffer V2', and 'Custom control'. The 'Config Repeater / Bridge' tab is active. It shows 'Configure Repeater/Bridge ID' as '99999950', a 'Connect' button, 'uptime: 15 min', and a 'Disconnect' button. There is an 'AES key' field and a note 'Leave empty if no encryption is used'. At the bottom, there is a field for 'Expected total battery lifetime years'.

In the sniffer tab, Packet Sniffer V2, one will see all data that are transmitted by the gateway over the MQTT interface.

Lansen Configurator rev 1.6.1.0 LAN-MBUS-R2/R3/R4 V10 and V11/Bridges/Pulsecounters Date 20231220

Connected to MQTT with config 00000012@friendly-foguard.cloudmqtt.com:1883, At least once (QoS 1)

Log to file: ☐

Config Repeater / Bridge Config Pulse Meter Config Pulse Counter Config Modbus Master **Packet Sniffer V2** Custom control

Id	Time	RSSI	Length	Man (LLA)	Serial (LLA)	Ver (LLA)	Type (LLA)	Last routed by (RP)	Hop (RP)	RX state (RP)	Time to change (RP)	Relative RSSI (RP)
33	2024-03-21 08:08:01.000	-66	30	LAS	00159185	07h	Leakage detector	20202020	0	False	0	<0
34	2024-03-21 08:08:01.000	-84	30	LAS	00159219	07h	Leakage detector		0	False	0	<0
35	2024-03-21 08:08:02.000	-52	75	LAS	00000007	0Ah	Smoke detector		0	False	0	<0
36	2024-03-21 08:08:02.000	-77	30	LAS	00159189	07h	Leakage detector		0	False	0	<0
37	2024-03-21 08:08:02.000	-47	75	LAS	00000006	0Ah	Smoke detector		0	False	0	<0
38	2024-03-21 08:08:03.000	-63	62	DME	53732003	41h	Heat outlet		0	False	0	<0
39	2024-03-21 08:08:04.000	-77	30	LAS	00159218	07h	Leakage detector		0	False	0	<0
40	2024-03-21 08:08:05.000	-83	30	LAS	00159163	07h	Leakage detector		0	False	0	<0
41	2024-03-21 08:08:05.000	-79	30	LAS	00163119	08h	Electricity		0	False	0	<0
42	2024-03-21 08:08:06.000	-68	87	BMT	15701507	10h	Room sensor		0	False	0	<0
43	2024-03-21 08:08:09.000	-83	30	LAS	00159226	07h	Leakage detector		0	False	0	<0
44	2024-03-21 08:08:10.000	-77	46	LAS	00160664	08h	Room sensor		0	False	0	<0
45	2024-03-21 08:08:10.000	-80	30	LAS	00159200	07h	Leakage detector		0	False	0	<0
46	2024-03-21 08:08:11.000	-93	30	LAS	00159188	07h	Leakage detector		0	False	0	<0
47	2024-03-21 08:08:11.000	-74	30	LAS	00163206	08h	Electricity		0	False	0	<0
48	2024-03-21 08:08:13.000	-84	30	LAS	00159171	07h	Leakage detector		0	False	0	<0
49	2024-03-21 08:08:13.000	-98	30	LAS	00159160	07h	Leakage detector		0	False	0	<0
50	2024-03-21 08:08:14.000	-65	30	LAS	00159160	07h	Leakage detector	20202020	0	False	0	<0
51	2024-03-21 08:08:15.000	-91	30	LAS	00159228	07h	Leakage detector		0	False	0	<0
52	2024-03-21 08:08:16.000	-72	78	LAS	00042582	0Ah	VOC sensor		0	False	0	<0
53	2024-03-21 08:08:17.000	-81	30	LAS	00159212	07h	Leakage detector		0	False	0	<0
54	2024-03-21 08:08:17.000	-54	30	LAS	00000090	00h	Door/window		0	False	0	<0
55	2024-03-21 08:08:17.000	-87	30	LAS	00159208	07h	Leakage detector		0	False	0	<0
56	2024-03-21 08:08:19.000	-91	78	LAS	00162413	0Ah	VOC sensor		0	False	0	<0
57	2024-03-21 08:08:20.000	-50	30	LAS	00000091	00h	Door/window		0	False	0	<0
58	2024-03-21 08:08:20.000	-66	181	LAS	00128923	1Eh	Com controller	20202020	0	False	0	<0
59	2024-03-21 08:08:20.000	-66	30	LAS	00163098	08h	Electricity		0	False	0	<0
60	2024-03-21 08:08:21.000	-86	30	LAS	00163185	08h	Electricity		0	False	0	<0
61	2024-03-21 08:08:21.000	-80	30	LAS	00163186	08h	Electricity		0	False	0	<0

Autoscroll ☒ Only Latest Data ☐
☐ Filter Meters
☐ Filter Routed By

Meters Routed By Columns Keys

Filtered	Identity	Type
<input checked="" type="checkbox"/>	LAS 00163189	Electricity
<input type="checkbox"/>	IST 84080118	Water
<input type="checkbox"/>	LAS 00159230	Leakage detector
<input type="checkbox"/>	LAS 00000007	Smoke detector
<input type="checkbox"/>	EGD 60004325	Room sensor
<input type="checkbox"/>	LAS 00159195	Leakage detector
<input type="checkbox"/>	LAS 00163208	Electricity
<input type="checkbox"/>	LAS 00159202	Leakage detector
<input type="checkbox"/>	LAS 00159197	Leakage detector
<input type="checkbox"/>	LAS 02001479	Room sensor
<input type="checkbox"/>	LAS 11111111	Carbon dioxide
<input type="checkbox"/>	LAS 00163038	Carbon dioxide
<input type="checkbox"/>	LAS 00000014	Room sensor
<input type="checkbox"/>	LAS 20202020	Unidirect repeater
<input type="checkbox"/>	LAS 00159147	Leakage detector
<input type="checkbox"/>	LAS 00159149	Leakage detector
<input type="checkbox"/>	LAS 00159194	Leakage detector
<input type="checkbox"/>	LAS 00159229	Leakage detector
<input type="checkbox"/>	LAS 00163192	Electricity
<input type="checkbox"/>	LAS 00000002	Room sensor
<input type="checkbox"/>	LAS 00116517	Room sensor
<input type="checkbox"/>	LAS 00000012	Com controller
<input type="checkbox"/>	LAS 00159206	Leakage detector
<input type="checkbox"/>	LAS 00163110	Electricity
<input type="checkbox"/>	LAS 02000480	Room sensor
<input type="checkbox"/>	LVS 40406073	Gold meter

To see the settings of the gateway one must first connect to the gateway. This is done by clicking “Connect” and then all settings will be retrieved from the gateway and displayed in the program.

Lansen Configurator rev 1.8.0.5 LAN-MBUS-R2/R3/R4 V10 and V11/Bridges/Pulsecounters Date 20250320

Connected to MQTT with config 99999543@pf-qz185rtnag102zch1n.cedalo.cloud:1883, At most once (QoS 0)

Log to file: ☐

Config Repeater / Bridge Config Pulse Meter Config Pulse Counter Config Modbus Master **Packet Sniffer V2** Custom control

Configure Repeater/Bridge ID: 99999543 uptime: 15 min

AES key: Leave empty if no encryption is used

Expected total battery lifetime years:

Note: Enter repeater/bridge ID example: "01234567" and press Connect. Make sure that the repeater is listening. A magnet can be used for "waking" the repeater/bridge. Note: If the bridge is battery driven the configurator will wait for an incoming connect from the bridge and when that is received read out the settings and keep the connection active for x minutes. Supported by bridge rev 113 and newer.

Basic | Timers | Routing | Meters | Clock | Bridge

Current access

Current access groups:

Access password:

Enter the password for the desired access level for wireless connection access. While all parameters can be read without a password, a valid password is required to make changes to the configuration. Supported by bridge rev 1013 and newer.

Enter AES key here if encryption have been enabled on the repeater. AES key is also needed to enable/disable encryption.

MBUS input mode: ☐ Advanced setting: Support S mode

MBUS output mode:

MBUS output frame format:

Min install RSSI: Value: [0 .. 100], Empty or 0 = not used

Changes to min RSSI requires a restart to take effect

Antenna gain:

WMBUS antenna:

Modem antenna:

Note: The repeater/bridge accepts C and T mode simultaneously. Don't set S mode if you don't are 100% sure consult Lansen, the dongle needs to be reconfigured after this change. OMS compatible modes are T mode Frameformat A and C mode Frameformat A. Kamstrup system use C mode Frameformat B.

Min install RSSI is the minimum signal strength a packet must be received by a repeater to be added to the routing list. The value is a converted value between 0-100 where 100 is the repeater RSSI limit and 0 is not used. For example if you only want meters close by to be accepted write the value 70 in this field.

Antenna Gain: When using an external antenna with Gain there might be needed to lower the output from the power to stay below the CE regulation. If you are using a antenna with 3dbi gain you should set the gain to 3 to compensate for the gain in the antenna.


Connect to the gateway using a USB to USB-C cable (wired)

IMPORTANT: When using a wired cable, the cable itself will supply the gateway with power. If you have the battery connected the cable will override the battery power supply.


To connect to the gateway using a USB to USB-C cable, perform the steps below.

Select the dropdown menu where it says “Dongle” and change the setting to “Wired Connection”.


If the program fails to connect to the device, try to select the com-port manually by changing the field from ‘Auto’ to the com-port of the wire. Make sure that the startup sequence is finished before connecting by wire.

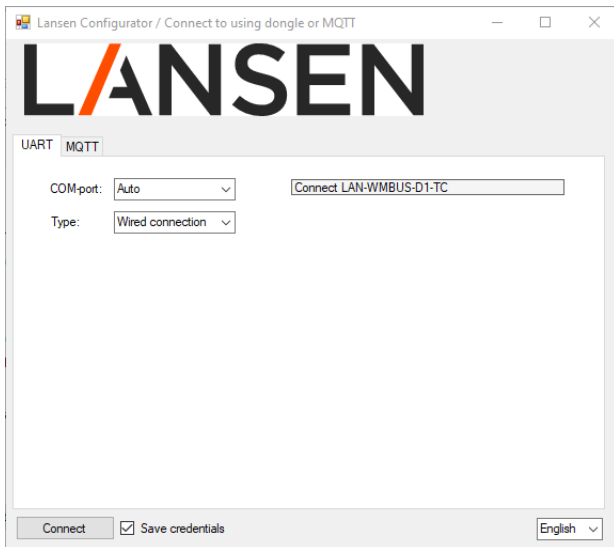


To change the settings to the gateway one must first connect to the gateway. This is done by putting in the serial number which can be found on the poke protection or the front label on the device, then clicking “Connect”. Once you have connected to the device you can change all the settings and parameters. The packet sniffer will not be operating when connected through wire.

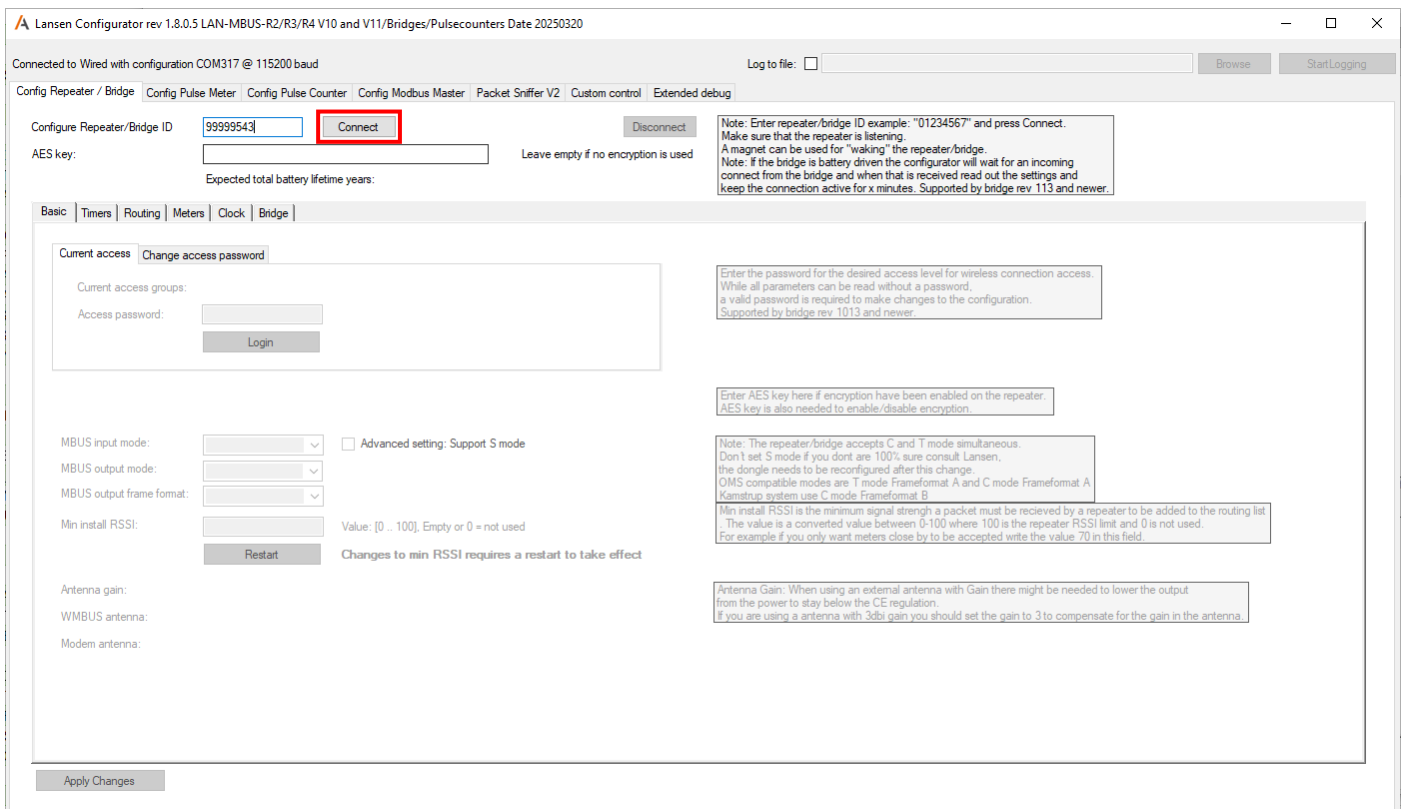

When connected through wire you can now also go into a new feature called the “Extended Debug”.

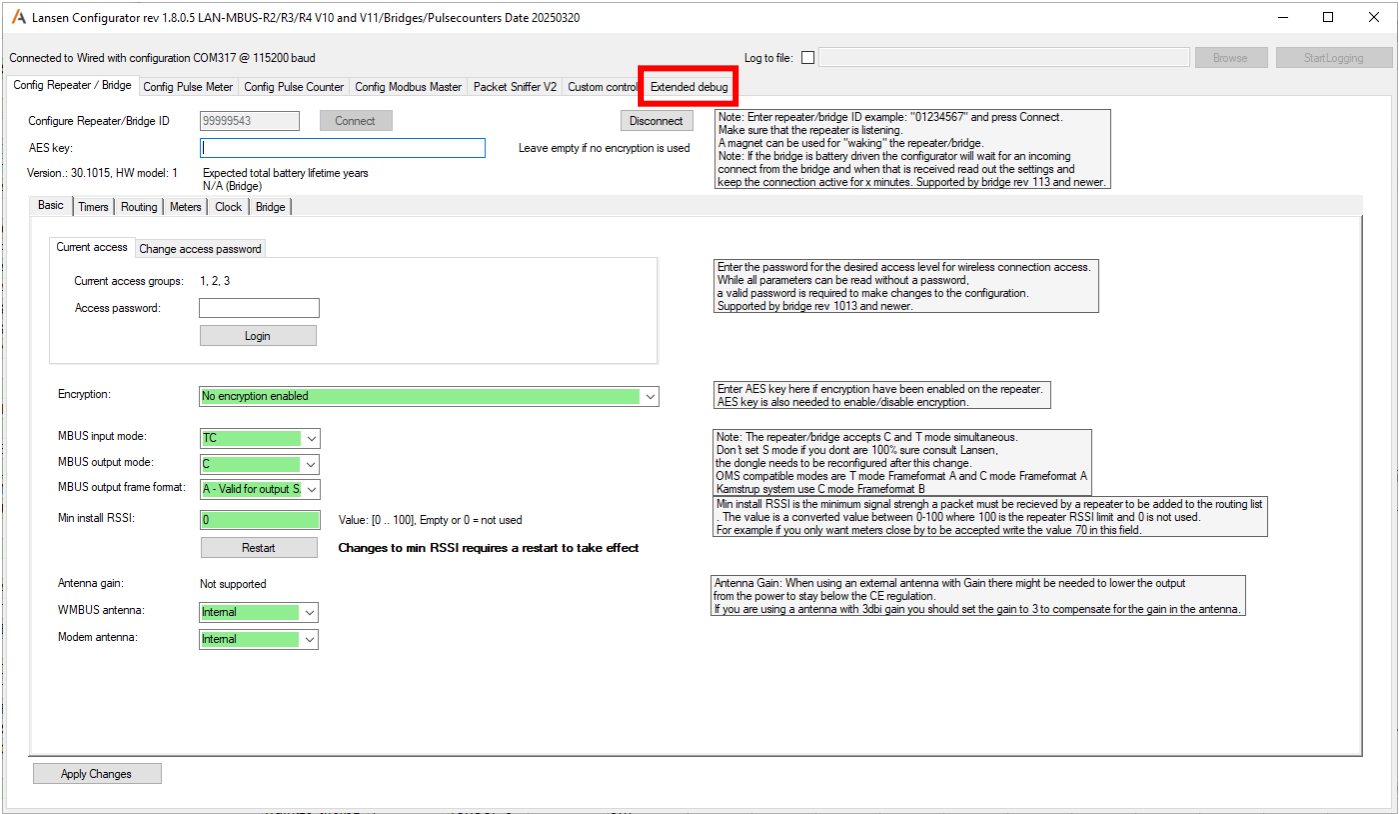

This area of the configurator allows you to see the AT commands to further debug and see what is going on with the gateway if needed, simply select “Enabled” in the top right corner and it will start, granted the MQTT is active on the gateway. Make sure to disable the extended debugger when you are done looking at the AT commands.

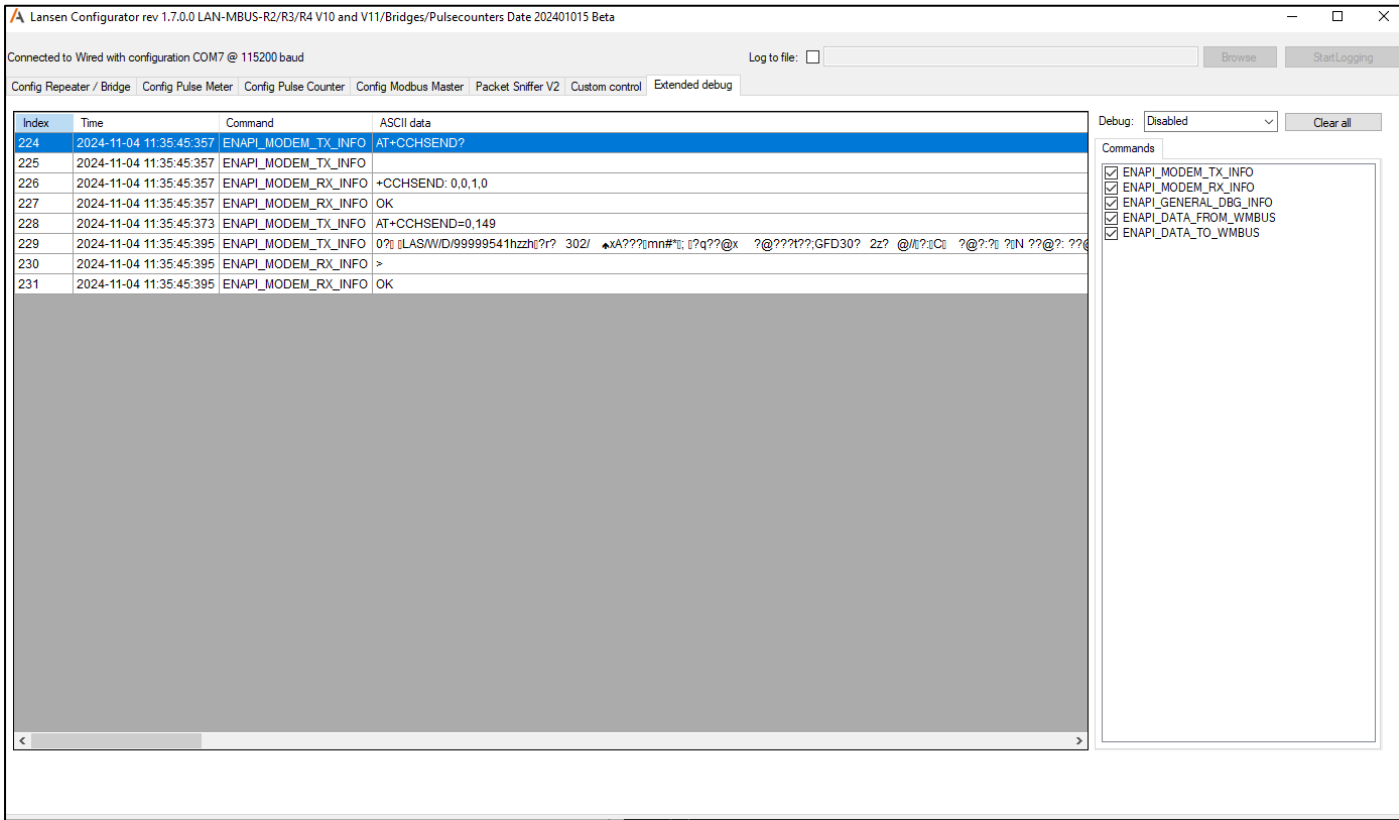

Configuration settings for a gateway

This chapter is the same regardless if the connection has been made using the wM-Bus interface (see chapter **Connect to the gateway over wM-Bus interface using Lansen USB-dongle**, the wired connection (see chapter **Connect to the gateway using a USB to USB-C cable (wired)**, or the MQTT interface (see chapter **Connect to the gateway over MQTT interface**)

Once connected to a gateway, the different settings can be seen in the different tabs called *Basic*, *Timers*, *Routing*, *Meters*, *Clock*, and *Bridge*. Be aware that there will be sub-tabs within some of those tabs for more settings.

The screenshot shows the 'Basic' tab of the Lansen Configurator. The interface includes a top bar with the title 'Lansen Configurator rev 1.8.0.5 LAN-MBUS-R2/R3/R4 V10 and V11/Bridges/Pulsecounters Date 20250320' and a status bar indicating 'Connected to Wired with configuration COM317 @ 115200 baud'. The main content area is divided into several sections: 'Configure Repeater/Bridge ID' with a text field '99999543' and 'Connect'/'Disconnect' buttons; 'AES key' section with a text field and a note about encryption; 'Version' section showing '30.1015, HW model: 1' and 'Expected total battery lifetime years N/A (Bridge)'; 'Basic' sub-tab with 'Current access' and 'Access password' fields; 'Encryption' section with a dropdown set to 'No encryption enabled'; 'MBUS input mode' (TC), 'MBUS output mode' (C), and 'MBUS output frame format' (A - Valid for output S); 'Min install RSSI' section with a value of '0' and a 'Restart' button; 'Antenna gain' section with 'Internal' selected for both WMBUS and Modem antennas. A red arrow points to the 'Restart' button. The bottom of the window has an 'Apply Changes' button.

When a setting is changed, it changes color from green to red. To send the setting to the gateway, click “Apply Changes”.

When a setting is successfully received by the gateway, it responds either with the new setting, if the setting was accepted, or the old setting, if the setting was not acceptable. The changed setting will then change back to green.

The screenshot shows the 'Timers' tab of the Lansen Configurator. The interface includes a top bar with the title 'Lansen Configurator rev 1.8.0.5 LAN-MBUS-R2/R3/R4 V10 and V11/Bridges/Pulsecounters Date 20250320' and a status bar indicating 'Connected to Wired with configuration COM317 @ 115200 baud'. The main content area is divided into several sections: 'Listen timers' sub-tab with 'Start time schedule' (Every week) and 'Repeat start time schedule' (Every week); 'Interval' section with 'Always On' selected; 'Listen/pause timers' section with '1' minutes; 'Listen timer min interval' (0 hours) and 'Listen timer max value' (0 minutes); 'Magnet/reed timer' section with '15' minutes; 'Monthly reading start time' (08:21) and 'Monthly reading listen time' (0 minutes). A red arrow points to the 'Magnet/reed timer' field. The bottom of the window has an 'Apply Changes' button.

Settings in the gateway

The following chapter will explain in detail what all the settings that are available mean. Note that all settings are supported by the Gateway.

Basic-tab


This tab contains the so called “basic” parameters of the gateway such as:

Encryption

Note: This option does not affect the encryption of incoming packets from sensors/meters.

This parameter is used to enable/disable the encryption options for a gateway. By default, the gateway is configured to not use encryption. This encryption is NOT used for encrypting incoming data packets from sensors/meters, it is only used for packets sent to the gateway for configuration from, for example, a LAN-WMBUS-D1/D2-TC configuration device.

Note: The AES key is not needed when configuring the device using an active MQTT connection.

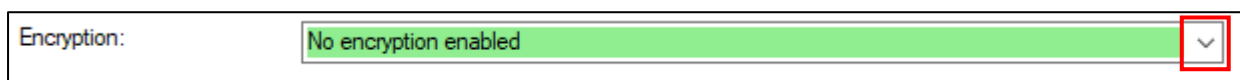

The different encryption options can be seen by clicking on the arrow marked by a box in the picture above. There are four options available, see table below. To change from one option to another, the correct AES key must be written in the field *AES key*.

Option	Meaning
No encryption enabled	Encryption is not enabled (default). When this option is enabled, the user does not need to write a key in the field <i>AES key</i> to change the other parameters for the GW.
Enabled for configuration	Encryption is enabled. When this option is enabled, the field <i>AES key</i> must contain the correct key for the GW to apply any parameter changes.
Enabled: OMS time sync	This option enables the OMS time sync. This option needs to be enabled if time synchronization should only be allowed if the time synchronization packet is sent encrypted. This packet is sent from the gateway using the OMS time synchronization format.
Enabled: OMS time sync and configuration	This option combines the two options above, i.e., <i>Enabled for configuration</i> and <i>Enabled: OMS time sync</i> .

MBUS mode

These settings are used to set the input and output communication format for the gateway.

MBUS input mode:	<input type="text" value="TC"/>
MBUS output mode:	<input type="text" value="C"/>
MBUS output frame format:	<input type="text" value="A - Valid for output S"/>

By default, the gateway always accepts incoming data in C- and T-mode but the output mode can be changed to S-, C-, or T-mode with frame format A or B. Recommended use is:

- Input = TC
- Output = C
- Frame format = A

The gateway can listen for sensors in S-mode by first enabling “Advanced setting” and then setting the input mode to S-mode. Make sure all other configurations of the gateway are done before setting it to S-mode as it will not be able to configure it afterwards (if using the LAN-WMBUS-D1/D2 to configure the device).

Note: If input mode is set to S, it will not be possible to configure the gateway further until the USB-dongle has been configured to send in S-mode. Contact Lansen for more information on how to proceed with this.

Note: If input mode is set to S-mode, then the gateway will not receive C- and T-mode data.

Min install RSSI

This parameter is used to ensure only meters with good signal strength is retransmitted by the gateway.

Min install RSSI:	<input type="text" value="0"/>	Value: [0 .. 100]. Empty or 0 = not used
-------------------	--------------------------------	--

By changing this parameter, you determine the minimal RSSI required from a meter to be accepted into the gateways internal routing list. This can be used in an environment where multiple gateways are deployed. By using this setting, only meters with a good connection to the gateway are handled, thus decreasing the risk for data collision in the air due to less retransmissions by fewer gateways.

The gateway must be restarted after this parameter is changed, otherwise the internal routing list will not be changed. A restart can be performed by disconnecting and connecting the power/battery again or by clicking on *Restart* in Lansen Configurator found under the “Basic” tab.

Antenna

This setting is used if a gateway has a connected external antenna with a gain.

Antenna gain:	Not supported
WMBUS antenna:	<input type="text" value="Internal"/>
Modem antenna:	<input type="text" value="Internal"/>

Having a large external antenna, especially with a gain, is advantageous since it allows a gateway to have a better reception. However, our gateways are built to send on the maximum allowed output power and using an antenna with gain causes the gateway to transmit with an output power greater than the legal limit.

To counteract this, set this setting to the specified gain on the external antenna and the gateway will lower its output power to match the gain, thus transmitting at the legal limit. This allows the gateway to use the full potential of the antenna when receiving while staying at the legal limit when transmitting. This parameter is only applicable to models which have external antenna on the wM-Bus interface (ending with an -X on the label).

The *WMBUS antenna* and *Modem antenna* parameters allows you as a customer to determine if you wish to alter your GW5 to use or stop using an external antenna.

Timers-tab

This tab contains parameters for the gateway which are timer-based, such as listen/pause timers and suppression timers. It is also possible to configure if the gateway should wakeup on specific days, weeks, or dates, e.g., Mondays or the 15th.

Listen timers

The first tab is for the listen timers. This is where you will decide monthly, weekly, daily, or even specific dates for the device to wake up. Furthermore, you can alter the magnet/reed timer for how long you wish your device to be forced to listen when using a magnet.

Start time schedule

This setting is used to control at what time and how often a gateway should start listening on selected weekdays, weeks, or even specific dates.

This setting is paired with the “Interval” and “Listen/pause timers” settings for how often, during the day selected, the device should be waking up. E.g., for a mains device the default setting is “Always on” and the device is constantly listening and sending information.

Start time schedule:	<input type="checkbox"/>	<input type="text" value="07:31"/>	on	<input checked="" type="checkbox"/> Mo	<input checked="" type="checkbox"/> Tu	<input checked="" type="checkbox"/> We	<input checked="" type="checkbox"/> Th	<input checked="" type="checkbox"/> Fr	<input checked="" type="checkbox"/> Sa	<input checked="" type="checkbox"/> Su
Repeat start time schedule:	<input type="text" value="Every week"/>									

From left to right in the picture above, they mean:

- **Checkbox:** When this checkbox is marked, the parameter **Start time** is active. The gateway will start listening at the time, intervals, and days specified by the next options.
- **Time field:** The time set in this field indicates what time (UTC) each day the gateway will wake up and store packets. The time defined in this field must be equal or less than the chosen period interval. Furthermore, the gateway will be listening for the time defined in the parameter **Listen/pause timers**.
- **Active days:** This option controls which days the gateway is listening. Simply mark the checkboxes for the days the gateway should be listening and uncheck the others. Here you can select specific dates if the **Repeat start time schedule** is set to “On certain dates”. For instance, if uploads are needed on the 1st and the 15th of every month, but only on weekdays (Monday to Friday), select “1” and “15” and mark “Mo, Tu, We, Th, Fr”. If the 1st falls on a weekend and Monday is on the 2nd, the upload will take place on the 2nd instead of the 1st.

Repeat start time schedule: This allows you to determine the weekly interval for when the device should wake up. Here you can also select “On certain dates” which further allows you to customize when you want the device to wake up and send information.

Interval: This option defines how often the gateway will start listening from the time set in the option *Time field*. This parameter has a “Custom” alternative where you can specify exact times for the device to wake up or you can choose between predetermined intervals. This is directly linked to the next parameter “Listen/pause timers”.

Listen/Pause timers: This is linked directly to the “Interval” parameter which allows you, in exact minutes, to determine the interval of when the device is waking up. E.g., 30/1410 will result in 30 minutes of listen time during a 24-hour period, in this example the “Interval” parameter will be set on 24h.

Magnet/Reed timer: This parameter simply allows you to select for how long the device shall be forced to listen for wM-Bus and configuration packets when using a magnet to the left of the frontside label of the device.


Monthly reading start time

This setting is a separate timer which is used to wake the gateway at a specific date and time once a month and is useful in systems where meter data is also needed at a specific date and time every month.

Monthly reading start time:	<input checked="" type="checkbox"/>	15:44	on the	10th	of each month
Monthly reading listen time:	10 Minutes: [0 .. 65000]. 0 = Not used				

Suppression timer


This setting is used to reduce how often packets from each meter is stored by the gateway and the time can be set in either minutes or hours. It is a highly configurable parameter with several tabs to allow you freedom to configure each sensor/meter or repeater picked up by the gateway.

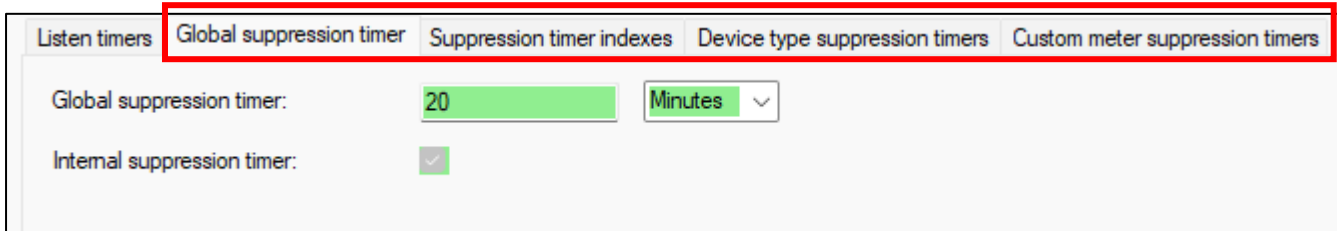

Listen timers	Global suppression timer	Suppression timer indexes	Device type suppression timers	Custom meter suppression timers
Global suppression timer:	20	Minutes		
Internal suppression timer:	<input checked="" type="checkbox"/>			

Global suppression timer


The global suppression timer is the default setting which will be set for your gateway unless otherwise specified. This means that your gateway will only send the latest meter data every 20 minutes even if the meters send data e.g., every 2 minutes.

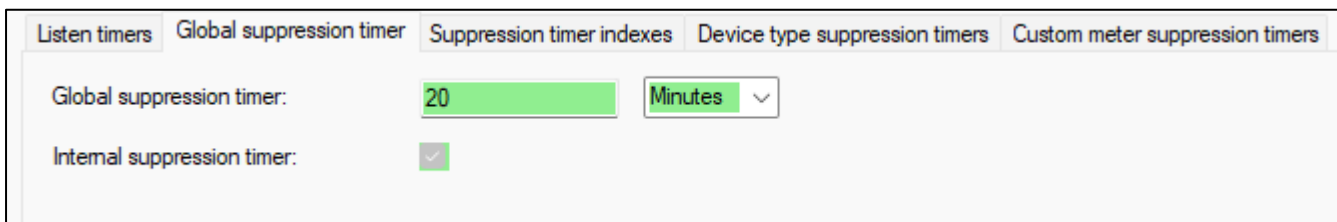

Listen timers	Global suppression timer	Suppression timer indexes	Device type suppression timers	Custom meter suppression timers
Global suppression timer:	20	Minutes		
Internal suppression timer:	<input checked="" type="checkbox"/>			

Internal suppression timer

The internal suppression timer can only be activated or deactivated if the global suppression timer is set to 0. When the internal suppression timer is activated, even with the global suppression timer set to 0 the device will have a 10 second internal suppression timer. However, if you put the global suppression timer to 0 and turn OFF the internal suppression timer, you will truly have no suppression timer at all.

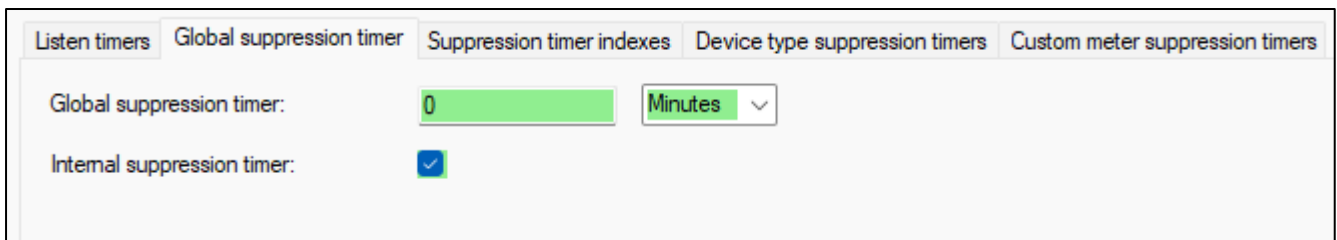

Listen timers	Global suppression timer	Suppression timer indexes	Device type suppression timers	Custom meter suppression timers
Global suppression timer:	0	Minutes		
Internal suppression timer:	<input checked="" type="checkbox"/>			

Suppression timer indexes

This tab will show you and allow you to create your own preconfigured indexes of suppression timers that you can apply for your meters/sensors. Index 0 is the global suppression timer (default), index 1-3 are configurable, and index 4-7 are predefined.

The screenshot shows the 'Suppression timer indexes' tab selected. It displays a list of suppression timer indexes from 0 to 7, each with a corresponding value in minutes. Index 0 is the global suppression timer (default). Indexes 1-3 are configurable, and indexes 4-7 are predefined.

Suppression timer index	Value (minutes)
Suppression timer index [0]:	20
Suppression timer index [1]:	7
Suppression timer index [2]:	15
Suppression timer index [3]:	30
Suppression timer index [4]:	60
Suppression timer index [5]:	240
Suppression timer index [6]:	720
Suppression timer index [7]:	1440

Device type suppression timers

This tab allows you to set specific device types to follow an index. E.g., if your gateway is picking up Room Sensors, you can configure it to always handle those devices with a specific suppression timer index compared to another type of device.

The screenshot shows the 'Device type suppression timers' tab selected. It displays a form for adding new mappings and a table for the current mappings.

Number of mappings: 0
Load all

Add new mapping:
Device type: Other
Suppression timer index: 0 - Global
Add

Selected	Index	Type	Suppression index
----------	-------	------	-------------------

List of current device type suppression indexes

Delete selected
Delete all

Custom meter suppression timers

This tab allows you to set and determine suppression timers for specific meters/sensors individually. Using the manufacturing code, serial number, device type and version you can set specific suppression timers to each device linked to the gateway.

Wildcards can be used for flexibility, e.g., if a wildcard is set for the manufacturing code, all meters with the same serial number, device type, and version will use the specified timer, regardless of the manufacturer code.

Note: To unlock the Manufacturer code or serial number parameter, simply toggle the "Wildcard" checkbox on and off.

The screenshot shows the 'Custom meter suppression timers' tab selected. It displays a form for adding new mappings and a table for the current mappings.

Manufacturer Code: LAS
Serial number: 99999543
Device type: Com controller
Version: 30
Suppression timer index: 0 - Global

Wildcard
Wildcard

Add Clear form

Routing-tab

For your gateway device, the routing tab will allow you to either filter by manufacturer ID or change if you wish to route only OMS messages or all messages picked up by the gateway.

Accept Manufacturer ID

This parameter is used if the gateway should only store packets from meters with a specific manufacturer code. In other words, this is manufacturer code filtering. This is useful in areas where different companies and manufacturers are active. If all fields are empty, no filtering is done by the gateway and packets from all meters will be stored.

Accepted Manufactur IDs:	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	Example: LAS
	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	

Route messages

This parameter has two options:

- Route only OMS messages: The gateway will only store OMS compatible packets
- Route all messages: The gateway stores both OMS and non-OMS compatible packets

Route messages:	<input type="text" value="Route only OMS messages"/>
-----------------	--

Meters-tab

The settings and options in this tab have to do with the internal routing list of a gateway. In this tab, meters can be viewed, added, and removed as explained in each chapter below.

Automatic meter installation

Automatic meter installation: ☒ YES

When this checkbox is marked, a gateway will automatically add received meters to its internal routing list of maximum 2000 unique meters. If it is not desired to add any more meters or to have full control of which meters are stored by a gateway, uncheck the checkbox.

NOTE: If this setting is disabled and no meters are stored in the internal routing list, then no meters will be stored by the gateway. In this case, meters must be added manually.

Number of meters

Number of meters: 926 1074 free slots
Load all meters

This field displays how many meters there currently are in the internal routing list of the gateway. On the right-hand side of the field is the currently available number of slots available. To view all the meters in the internal routing list, click on the button **Load all meters**. This will fill up the list on the right-hand side of the program.

Add meter(s) manually to internal routing list

This is where a user can manually add a meter to the internal routing list of a gateway.

	Manufacturer	Serial number	Device type	Version
Add meter data:	<input type="text"/>	<input type="text"/>	Wildcard <input type="button" value="v"/>	<input type="text"/>
	<input type="text"/>	<input type="text"/>	Wildcard <input type="button" value="v"/>	<input type="text"/>
	<input type="text"/>	<input type="text"/>	Wildcard <input type="button" value="v"/>	<input type="text"/>
	<input type="text"/>	<input type="text"/>	Wildcard <input type="button" value="v"/>	<input type="text"/>
	<input type="text"/>	<input type="text"/>	Wildcard <input type="button" value="v"/>	<input type="text"/>
	<input type="text"/>	<input type="text"/>	Wildcard <input type="button" value="v"/>	<input type="text"/>
<input type="button" value="Add meter(s)"/>				

To add a meter to the internal routing list, fill in the manufacturer ID, the serial number, the device type and version, finish by clicking on the button **Add meter(s)**. The meter(s) will then be added to the gateway.

NOTE: Adding meters manually can only be done if the parameter *Automatic meter installation* is disabled.

[Add meter\(s\) from file to internal routing list](#)

Instead of adding a meter one by one, a user can instead import a csv-file with many meters.

Import meter data: <input type="text"/> <input type="button" value="Browse"/> <input type="button" value="Import .csv-file"/>	Example CSV file: ManufacturerCode;IdentificationNumber;DeviceType;Version LAS;11111111;18;03 LAS;22222222;18;03
--	---

<u>Device type by hex.</u>			
OTHER	0	PRESSURE	18
OIL	1	AD_CONVERTER	19
ELECTRICITY	2	SMOKE_DETECTOR	1A
GAS	3	ROOM_SENSOR	1B
HEAT_OUTLET	4	GAS_DETECTOR	1C
STEAM	5	DOOR_WINDOW	1D
WARM_WATER	6	LEAKAGE_DETECTOR	1E
WATER	7	OCCUPANCY	1F
HCA	8	BREAKER	20
COMPRESSED_AIR	9	VALVE	21
COOLING_OUTLET	A	CUSTOMER_UNIT	25
COOLING_INLET	B	WASTE_WATER	28
HEAT_INLET	C	WASTE	29
SYSTEM_COMPONENT	D	CARBON_DIOXIDE	2A
UNKNOWN_MEDIUM	E	VOC_SENSOR	2B
CALORIFIC	14	COM_CONTROLLER	31
HOT_WATER	15	U_REPEATER	32
COLD_WATER	16	BI_REPEATER	33
DUAL_WATER	17	RADIO_CONVERTER_SYSTEM	36
		RADIO_CONVERTER_METER	37

To add a file, click on “Browse” and select the csv-file with the meters to be added to the gateway. Once a file has been selected, click “Import csv-file” to start uploading the meters in the file.

Note: The csv-file **MUST** on the first row start with the text **ManufacturerCode – IdentificationNumber – DeviceType - Version** in their own respective columns, otherwise the file will not be uploaded to the gateway.

Note: Adding meters manually can only be done if the parameter *Automatic meter installation* is disabled.

Delete meter(s)

This is done if one, or several, meters should not be retransmitted by a gateway. To see this list, first click on 'Load all meters'.

To remove all meters, click on the button **Delete all**. This is only possible if *Automatic meter installation* is enabled.

Use the button **Delete selected** if only selected meters should be deleted. Simply mark the meters in the list which are unwanted and click on the button **Delete selected** – the gateway will then remove the selected meters from its internal routing list. The button **Delete selected** is only enabled when the parameter *Automatic meter installation* is disabled.

Selected	Index	MAN	ID	Type	Version
<input type="checkbox"/>	504	LAS	00197550	Unidirect repeater	0Bh
<input type="checkbox"/>	702	LAS	00197735	Carbon dioxide	0Ah
<input type="checkbox"/>	726	LAS	00197736	Carbon dioxide	00h
<input type="checkbox"/>	718	LAS	00197939	Com controller	1Eh
<input type="checkbox"/>	1221	LAS	00199013	Room sensor	46h
<input type="checkbox"/>	1261	LAS	00199014	Room sensor	46h
<input type="checkbox"/>	1772	LAS	00199054	Com controller	1Eh
<input type="checkbox"/>	279	LAS	00201010	Room sensor	1Eh
<input type="checkbox"/>	638	LAS	00203043	Room sensor	1Eh
<input type="checkbox"/>	471	LAS	01002019	Smoke detector	0Ah
<input type="checkbox"/>	919	LAS	01002051	Smoke detector	0Ah
<input type="checkbox"/>	974	LAS	01002058	Smoke detector	0Ah
<input type="checkbox"/>	519	LAS	01002063	Smoke detector	0Ah
<input type="checkbox"/>	727	LAS	01002079	Smoke detector	0Ah
<input type="checkbox"/>	175	LAS	01002135	Smoke detector	0Ah
<input type="checkbox"/>	1437	LAS	01002197	Smoke detector	0Ah
<input type="checkbox"/>	1485	LAS	01002199	Smoke detector	0Ah
<input type="checkbox"/>	313	LAS	01002207	Smoke detector	0Ah
<input type="checkbox"/>	710	LAS	01002279	Smoke detector	0Ah
<input type="checkbox"/>	1462	LAS	01002396	Smoke detector	0Ah
<input type="checkbox"/>	424	LAS	01002413	Smoke detector	0Ah
<input checked="" type="checkbox"/>	0	LAS	01002426	Smoke detector	0Ah

This is the list of all meters currently in the repeater.

Removes elected meters from the routing list. Please note that max 5 meters can be removed at a time.

Delete selected

Remove all meters from the routing list and all data.
Note. The complete clear of memory takes about 60-120 seconds. Be patient.

Delete all

Clock-tab

This tab shows information about the internal clock of the gateway.

Repeater clock (UTC)	2020-07-03 08:11:55
Clock diff (s):	0
<input type="button" value="Sync clock with PC"/>	

The upper field, *Repeater clock (UTC)*, displays the internal clock of the gateway as UTC-time while the lower field, *Clock diff (s)*, shows how many seconds the internal clock of the gateway differs from the current clock on the PC.

The gateway keeps synchronization using the configured NTP server so no synchronization with PC is needed. To synchronize the gateway clock to the PC, simply click on the button **Sync clock with PC**.

NOTE: The time synchronization is performed each time the device connects to the internet or every 12 hours. The gateway LAN-WMBUS-GW5 has a highly accurate onboard temperature compensated clock for minimum drift and the expected drift is less than 0.5 seconds/day.

Bridge-tab

This tab contains settings on how the gateway should connect and communicate with MQTT. Some of these settings are only applicable for the LTE-M1 and CAT1/4G gateway while others are for the ethernet gateway (Example: B4-M-LR-A1-ETH).

In this tab it is possible to configure the MQTT server addresses. The new setting will come into effect on the next connection to internet or by forcing a new connection to internet by doing a restart. To do a restart, click on the button **Restart** in the *Basic* tab.

Note: When connecting via the LAN-WMBUS-D1/D2-TC dongle and not entering an AES key only the first letter of the MQTT settings will be retrieved.

Important: Make sure that all settings are valid when changes are made on a device in a remote location. If the settings are incorrect then it will not be possible to do any more configurations using the MQTT interface.

Make sure that all 4 settings are set correctly; MQTT host, username, password, and port since they are sent in the same configuration packet to the gateway. Meaning if only 1 parameter is changed the 3 other parameters are also changed to the current value in the GUI.

MQTT settings

These settings are only applicable for the LTE-M1 and CAT1/4G gateway.

MQTT settings	MQTT timers	Ethernet settings	Certificates	Firmware upgrade
MQTT host:	p		on port:	1
MQTT username:	L			
MQTT password:	4			
MQTT custom prefix:				
Internet security:	TLS off		None	<input type="checkbox"/> SNI
APN:				
NTP:	pool.ntp.org			
MQTT always online:	<input checked="" type="checkbox"/> YES			

Internet Security

- It is possible to turn on communication using TLS for the gateway when communicating with the MQTT broker.
- Server and client authentication requires preloaded certificates.
- SNI checkbox: You can enable or disable the gateway to use SNI when contacting the MQTT broker.

APN

It's possible to enter a specific APN, if needed. For LTE, the APN will be retrieved from the network if left empty in the configurator.

NTP

It is possible to setup a specific NTP server if desirable.

MQTT always online

This parameter should only be activated when having a GW5 Mains unless you are doing short-term tests with a battery driven gateway, otherwise the battery will be depleted very quickly. If connection drops it will automatically try to connect again.

MQTT timers

Upload time schedule

This is the time that the modem will connect to the MQTT server and upload the stored data. If the setting *MQTT always online* is set to yes, this setting has no effect.

Note: Do not set the setting *Modem upload time* to the same value as the listen time under *Listen/pause timer*.

The best solution on battery driven gateway is to first listen for incoming wM-Bus data then setup the gateway to upload the data later the same day.

Example:

Listen start time = 05:20

Listen time: 30 minutes

Modem Upload time: 06:00

The screenshot shows the 'MQTT settings' tab. The 'Upload time schedule' section has a checked box, a time selector set to '10:41', and a dropdown menu set to 'On certain dates'. Below this is a calendar grid for the month of May, with days 1 through 31. Days 1, 8, 15, 22, and 29 are highlighted in green, indicating they are selected. The days of the week (Mo, Tu, We, Th, Fr, Sa, Su) are also checked. Below the calendar are 'Select all' and 'Clear' buttons. The 'Modem upload time interval' is set to '24h'. The 'Min upload time interval' is set to '0' with a range of 'Hours: [0 .. 255]'. The 'Random modem upload time' is set to '0' with a range of 'Minutes: [0 .. 720]'.

Here you can select specific dates if the **Repeat start time schedule** is set to “**On certain dates**”. For instance, if uploads are needed on the 1st and the 15th of every month, but only on weekdays (Monday to Friday), select “1” and “15” and mark “Mo, Tu, We, Th, Fr”. If the 1st falls on a weekend and Monday is on the 2nd, the upload will take place on the 2nd instead of the 1st.

Certificates

The screenshot shows the 'Certificates' tab. On the left, under 'Current certificate status:', there are three rows: 'Root certificate:', 'Client certificate:', and 'Client key certificate:'. Each row has two input fields for 'Timestamp (UTC)' and 'Applied (UTC)', both containing '0'. Below these is an 'Apply certificate(s)' button. On the right, under 'Add/replace certificate:', there is a 'Certificate type:' dropdown menu set to 'Root'. Below it is a 'Certificate location:' input field with a 'Browse' button. At the bottom of this section is an 'Add certificate' button.

Under the certificates tab, it is possible to upload certificates to your gateway. 3 certificates can be selected in the dropdown menu on the right-hand side. *Root*, *Client Key* and *Client*. Simply add them one by one and finish the upload by pressing “Apply certificate(s)” on the left-hand side. Note that pressing “Apply Changes” instead of “Apply certificate(s)” will not upload the certificates.

Firmware upgrade

The screenshot shows the 'Firmware upgrade' tab. It displays two MCU sections. MCU 1 has 'HW model: 1', 'HW version: 2', and 'FW version: 1015'. It also has 'New FW URL:' and 'New FW version:' input fields. MCU 2 has 'HW model: N/A', 'HW version: N/A', and 'FW version: N/A', with corresponding 'New FW URL:' and 'New FW version:' input fields. At the bottom is an 'Upgrade bridge firmware(s)' button.

The firmware upgrade tab will allow you to manually update the firmware of the gateway. Simply type in a valid URL to the firmware as well as version number and finish by pressing “Upgrade bridge firmware(s)”.

Check routed messages with Packet Sniffer V2

Our program, Lansen Configurator, also includes a sniffer tab called *Packet Sniffer V2*. This page is seen in the picture below. By using *Packet Sniffer V2*, henceforth called the Sniffer, one can observe all packets sent in the area, both by meters and repeaters. It is important to note that the sniffer will not work unless you have a Lansen Dongle connected to your PC.

Lansens Configurator ver 1.8.0.5 LAN-MBUS-R2/R3/R4 V10 and V11/Bridges/Pulsecounters Date 20230520

Connected to Dongle with config COM5 @ 115200 baud, version: 11.5.1.1570

Log to file: ☐

Browse

Start Logging

Config Repeater / BridgeConfig Pulse MeterConfig Pulse CounterConfig Modbus MasterPacket Sniffer V2Custom control

ID	Time	RSSI	Length	Man (LLA)	Serial (LLA)	Ver (LLA)	Type (LLA)	Last routed by (RP)	DR1	DR2	DR3	DR4	DR5	DR6
11828	2025-05-08 09:44:04.877	-50	47	LAS	00160661	09h	Room sensor	00000001	22.11	22.32	21.54	32	31	29
8413	2025-05-08 09:02:05.869	-54	47	LAS	00160663	09h	Room sensor	00000009	20.71	20.39	20.47	32	31	30
11757	2025-05-08 09:43:25.466	-48	47	LAS	00160663	09h	Room sensor	00000001	20.87	20.66	20.47	35	32	30
12220	2025-05-08 09:48:18.156	-84	47	LAS	00160663	09h	Room sensor		20.88	20.69	20.47	35	33	30
8283	2025-05-08 09:01:26.803	-49	47	LAS	00160664	09h	Room sensor	00000009	21.85	21.62	21.87	30	29	28
11846	2025-05-08 09:44:13.125	-40	47	LAS	00160664	09h	Room sensor	00000001	22	21.8	21.87	33	31	28
12293	2025-05-08 09:49:16.246	-83	47	LAS	00160664	09h	Room sensor		22.07	21.83	21.87	34	31	28
8531	2025-05-08 09:02:50.307	-52	47	LAS	00160665	09h	Room sensor	00000009	21.68	21.36	21.23	31	30	29
12080	2025-05-08 09:48:48.645	-49	47	LAS	00160665	09h	Room sensor	00000001	21.95	21.69	21.25	32	31	29
12302	2025-05-08 09:49:22.891	-47	47	LAS	00160665	09h	Room sensor		21.98	21.71	21.25	32	31	29
8511	2025-05-08 09:02:44.284	-52	47	LAS	00160666	09h	Room sensor	00000009	23.73	23.51	21.93	28	27	28
12178	2025-05-08 09:47:55.210	-58	47	LAS	00160666	09h	Room sensor		23.87	23.76	22.05	28	28	28
12181	2025-05-08 09:47:55.768	-48	47	LAS	00160666	09h	Room sensor	00000001	23.87	23.76	22.05	28	28	28
6850	2025-05-08 08:43:37.708	-44	47	LAS	00160667	09h	Room sensor	00000001	22.32	21.98	21.86	30	30	28
8603	2025-05-08 09:03:27.400	-56	47	LAS	00160667	09h	Room sensor	00000009	22.52	22.16	21.86	30	30	28
11747	2025-05-08 09:43:20.435	-51	47	LAS	00160667	09h	Room sensor		22.69	22.49	21.9	30	30	29
8303	2025-05-08 09:01:31.868	-49	47	LAS	00160668	09h	Room sensor	00000009	23.62	22.83	22.29	29	29	27
11948	2025-05-08 09:45:03.982	-40	47	LAS	00160668	09h	Room sensor	00000001	24.02	23.6	22.29	28	28	27
12153	2025-05-08 09:47:36.683	-64	47	LAS	00160668	09h	Room sensor		24.04	23.63	22.29	28	28	27
8269	2025-05-08 09:01:24.048	-57	47	LAS	00160669	09h	Room sensor	00000009	21.54	21.34	21.71	31	30	28
11802	2025-05-08 09:43:51.614	-46	47	LAS	00160669	09h	Room sensor	00000001	21.85	21.59	21.71	31	30	28
12266	2025-05-08 09:48:52.456	-66	47	LAS	00160669	09h	Room sensor		21.88	21.62	21.72	31	30	28
8441	2025-05-08 09:02:16.445	-50	47	LAS	00160670	09h	Room sensor	00000009	21.4	21.33	21.5	30	29	28
12206	2025-05-08 09:48:10.702	-61	47	LAS	00160670	09h	Room sensor		21.51	21.43	21.49	31	30	28
12207	2025-05-08 09:48:10.959	-43	47	LAS	00160670	09h	Room sensor	00000001	21.51	21.43	21.49	31	30	28
8258	2025-05-08 09:01:17.780	-57	47	LAS	00160671	09h	Room sensor	00000009	21	20.99	21.05	31	30	28
12026	2025-05-08 09:45:43.464	-41	47	LAS	00160671	09h	Room sensor	00000001	21.03	21.01	21.05	31	31	28
12208	2025-05-08 09:48:11.574	-85	47	LAS	00160671	09h	Room sensor		21.03	21.01	21.05	31	31	28
8384	2025-05-08 09:01:55.091	-52	47	LAS	00162634	09h	Room sensor	00000009	17.75	17.73	17.99	40	40	39
10421	2025-05-08 09:24:39.499	-93	47	LAS	00162634	09h	Room sensor		17.76	17.73	18	40	40	39
44563	2025-05-08 09:45:06.737	-47	47	LAS	00162634	09h	Room sensor	00000001	17.84	17.74	18	40	40	39

☐ Autoscroll☒ Only Latest Data

☐ Filter Meters

☐ Filter Routed By

MetersRouted ByColumnsKeys

Filtered	MAN	ID	Type
<input type="checkbox"/>	LAS	00160664	Room se
<input checked="" type="checkbox"/>	LAS	00160665	Room se
<input checked="" type="checkbox"/>	LAS	00160666	Room se
<input checked="" type="checkbox"/>	LAS	00160667	Room se
<input checked="" type="checkbox"/>	LAS	00160668	Room se
<input checked="" type="checkbox"/>	LAS	00160669	Room se
<input checked="" type="checkbox"/>	LAS	00160670	Room se
<input checked="" type="checkbox"/>	LAS	00160671	Room se
<input type="checkbox"/>	LAS	00162413	VOC sens
<input type="checkbox"/>	LAS	00162414	VOC sens
<input type="checkbox"/>	LAS	00162415	VOC sens
<input type="checkbox"/>	LAS	00162416	VOC sens
<input checked="" type="checkbox"/>	LAS	00162634	Room se
<input type="checkbox"/>	LAS	00163038	Carbon d
<input type="checkbox"/>	LAS	00163070	Carbon d
<input type="checkbox"/>	LAS	00164822	Leakage
<input type="checkbox"/>	LAS	00180549	Room se
<input type="checkbox"/>	LAS	00187545	Com cont
<input type="checkbox"/>	LAS	00189169	Com cont
<input type="checkbox"/>	LAS	00189170	Com cont
<input type="checkbox"/>	LAS	00189173	Com cont
<input type="checkbox"/>	LAS	00190606	Com cont
<input type="checkbox"/>	LAS	00197550	Unidirect
<input type="checkbox"/>	LAS	00197736	Carbon d
<input type="checkbox"/>	LAS	00199013	Room se
<input type="checkbox"/>	LAS	00199014	Room se

Overview for the page Packet Sniffer V2.

Overview of the Sniffer

The Sniffer-view, as seen in the picture above, contains two lists – *Primary list* (left side) and *secondary list* (right side). The *primary list* shows information about the packets which the USB-dongle picks up while the *secondary list* contains some tabs which change what is shown in the list.

Furthermore, there are a couple of options in the sniffer, located in the upper right corner, that can be used to sort out or filter out necessary data in the *primary list*.

Sniffer options

The Sniffer has some options in the upper right corner which can be used to change what is shown in the *primary list*. Each option is explained below in greater detail.

Autoscroll

While active, the Sniffer will automatically scroll down to the bottom of the *primary list* every time a new packet is received. This option can be disabled so the user can scroll up in the *primary list* to observe older packets while still receiving new packets.

Filter Meters

When this option is enabled, then data will be filtered by the devices chosen in the tab *Meters* in the *secondary list*. By using this option, one can see packets from one (or more) specific meter which makes it easy to see if a meter is being retransmitted by a repeater or if packets from a repeater is being retransmitted by another repeater in a multihop setup. Simply mark the checkboxes of the meters which should be filtered in the *secondary list*.

Note: This option filters on the serial numbers visible in the column called **Serial** in the *primary list*.

Filter Routed By

This option is similar to the previous option, *Filter Meters*, but instead of filtering data which has been sent by selected meters, this option filters out data which has been transmitted from the specific repeater chosen in the tab *Routed by* in the *secondary list*.

Note: This option filters on the serial number in the column called **Last Routed By** in the *primary list*.

Only Latest Data

By using this option, the latest packet which has been picked up, whether it is a message transmitted from a meter or retransmitted from repeaters, will be shown. For example, if there is one meter and two repeaters in a setup, then there will be three rows in total. The value in the rows is updated whenever the Sniffer picks up a new packet.

This option can be used to minimize the number of rows shown in the program to get a better overview of all meters and repeaters in the area. If all packets need to be displayed in the Sniffer, then this option must be disabled.

Clear All

This button is used to clear all the packets read so far with the program and will therefore clear the *primary list*.

Primary list

This list, shown on the left side of the program, displays all the packets which has been received so far by the USB-dongle. How the packets and information for each packet is shown depends on the options selected in chapter **Sniffer options** and under the *secondary list*, columns.

Something to note is that each row is colored, and each color has a meaning. This is described in **Table 2** below. The reception depends on the *RP: RSSI*-column, i.e., how strong the signal is between the repeater and a meter.

It is also possible to sort the rows in this list by clicking on the top row of the columns which is going to be sorted. For example, all meters and repeaters will be sorted by serial number, from low to high, when clicking on **Serial**.

Table 2: Meanings of each color observable in the Sniffer. The reception is measured between repeater and meter.

Color meaning	Color
Good reception between meter and repeater	
Okay reception between meter and repeater	
Medium reception between meter and repeater	
Bad reception between meter and repeater	
Really bad reception between meter and repeater	
Meter packet picked up directly by USB-dongle	
Status packet sent by a repeater (not meter data)	

Secondary list

This list is used as a complement to the options in chapter **Sniffer options** and changes what is displayed in the *primary list*. There are four tabs in this list: *Meters*, *Router By*, *Columns* and *Keys*.

Meters

This tab, as seen by the picture on the right, contains four columns. For each new meter which has been received by the program, a new row is created, and each row contain the meter manufacturer code, serial number, and type.

The first column, *Filtered*, is used together with the option *Filter Meters*. If the option *Filter Meters* is enabled, then only the meters marked in this tab will be displayed in the *primary list*. This is useful if there are a lot of meters in the area and only a couple of meters are of interest.

The second column, *MAN*, contains the manufacturer code for each meter received. By clicking on the text *MAN*, the list will be sorted alphabetically (A to Z) for each manufacturer code.


The third column, *ID*, shows the serial number for each meter received by the program. By clicking on *ID*, you will sort the list from lowest to highest, and if you click twice, it will be sorted from highest to lowest.

The fourth column, *Type*, shows which type of meter it is. This column can also be used to sort the list by clicking on the name *Type* which then will sort the list alphabetically (A to Z).

Filtered	MAN	ID	Type
<input type="checkbox"/>	LAS	00190606	Com cont
<input type="checkbox"/>	LAS	00197550	Unidirect
<input type="checkbox"/>	LAS	00197736	Carbon d
<input type="checkbox"/>	LAS	00199013	Room se
<input type="checkbox"/>	LAS	00199014	Room se
<input type="checkbox"/>	LAS	00199054	Com cont
<input type="checkbox"/>	LAS	00206467	Carbon d
<input type="checkbox"/>	LAS	00206468	Carbon d
<input type="checkbox"/>	LAS	00206470	Carbon d
<input type="checkbox"/>	LAS	00206471	Carbon d
<input type="checkbox"/>	LAS	00206472	Carbon d
<input type="checkbox"/>	LAS	00206473	Carbon d
<input type="checkbox"/>	LAS	00206474	Carbon d
<input type="checkbox"/>	LGB	01137524	Gas
<input type="checkbox"/>	LAS	02000480	Room se
<input type="checkbox"/>	LAS	02000482	Room se
<input type="checkbox"/>	LAS	02001479	Room se
<input type="checkbox"/>	LAS	02002329	Room se
<input type="checkbox"/>	LAS	02004115	Room se
<input type="checkbox"/>	LAS	04004179	Carbon d
<input type="checkbox"/>	LAS	04013500	Carbon d
<input type="checkbox"/>	LAS	11111111	Leakage
<input type="checkbox"/>	FLO	15170191	Gas
<input type="checkbox"/>	BMT	15176158	Water
<input type="checkbox"/>	BMP	15800072	Heat Cos
<input type="checkbox"/>	BMT	16050020	Water

Routed By

This tab, seen in the picture on the right, only contains a checkbox and a serial number. For each new repeater received by the Sniffer, a new checkbox is created with the corresponding serial number of the received repeater.

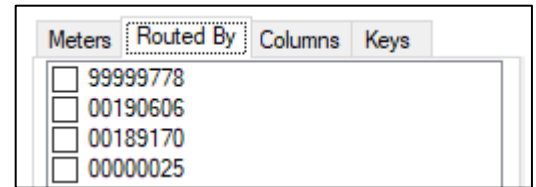

This tab is used together with the option *Filter Routed By*. If the option is enabled, then only packets transmitted or retransmitted by the selected repeaters will be shown in the *primary list*.

Columns

This tab is used to change which columns are shown in the *primary list*. Each available option is displayed in the table below. For further information about the DR1-25 alternatives, please look at the WMBUS data format guide for your product on our website www.lansen.io.

Column name	Meaning
Id	When a packet is received, it is assigned an ID number. Each time a new packet is received, the ID is incremented by 1.
Time	Timestamp when the packet was received by the computer.
RSSI	Signal strength of the packet sent by a repeater/meter and received by the USB-dongle. Value goes from 0 (strong signal) to larger negative values (weaker signal).
MBUS mode	Shows which MBus mode this packet was sent as (S-, C-, or T-mode).
Frame format	Shows which Frame Format this packet was sent as (A-, or B-format).
Freq Error (kHz)	Shows approximately how much off the center frequency (868.95 MHz) the repeater/meter was when sending this packet.
Length	Number of bytes in the received data packet.
Man (LLA)	Manufacturer ID of the device, either repeater or meter, which sent the packet.
Serial (LLA)	Serial number of the device, either repeater or meter, which first sent out the packet.
Version (LLA)	Version of the device, either repeater or meter, which first sent out the packet.
Type (LLA)	Shows what type of device, either repeater or meter, which first sent out the packet.
NWK	Shows if this packet is using short header (0x7A) or long header (0x72) in the CI-field. Note: If long header is used, then more information can be found in the ALA columns.
Enc. Mode	Shows if this packet is encrypted (0x05) or not (0x00).
Status	Shows the status byte (also called Status Field) of the original transmitter of this packet.
Acc	Shows the access number of the original transmitter of this packet.
Man (ALA)	Shows the manufacturer ID of the device which the meter data of this packet belongs to. Note: Only shown if packet was sent using long header in the CI-field.
Serial (ALA)	Shows the serial number of the device which the meter data of this packet belongs to. Note: Only shown if packet was sent using long header in the CI-field.
Ver (ALA)	Shows the version of the device which the meter data of this packet belongs to. Note: Only shown if packet was sent using long header in the CI-field.
Type (ALA)	Shows what type of device of which the meter data of this packet belongs to. Note: Only shown if packet was sent using long header in the CI-field.
RP: Last routed by	Shows the serial number of the repeater which retransmitted the data most recently.
RP: Hops	Number of times the packet has been retransmitted by repeaters.
RP: RX state	Shows which transmission state the repeater is currently in. TRUE=Listening and FALSE=Pausing. Note: If a magnet has been used to wake up the repeater, then it is possible for the repeater to transmit data even if this column is FALSE.
RP: Time to change	Indicates how many seconds it is left until the repeater changes the RX-state.
RP: Current time	Shows the current time on the repeater.
RP: Start time	Shows the time set for the parameter <i>Start time</i> if it is active.
RP: Listen days	Shows the selected weekdays for the parameter <i>Start time</i> if it is active.
RP: Microrepeater	Shows if the repeater is a microrepeater (1) or a normal repeater (0).
RP: Mains connected	Shows if it is a mains-operated (1) or battery-operated (0) repeater.
RP: Listen active reason	Shows what the current listening reason is. See Table 3 for more details. Note that multiple reasons can be active at the same time.
RP: Relative RSSI	Signal strength of the packet sent by a repeater/meter and received by the repeater. Value goes from 0 (strong signal) to larger negative values (weaker signal).
Raw packet	Shows all bytes in the received packet.

Table 3: Description of the different values in columns RP: Listen active reason.

Bit	Meaning
0 (0x01)	Listen timer running
1 (0x02)	Short listen window (60 seconds) for parameter <i>Start time</i> is running
2 (0x04)	Long listen window (time set in parameter <i>Listen/pause timer</i>) and parameter <i>Start time</i> is running
3 (0x08)	Monthly listen timer running
4 (0x10)	NOT USED
5 (0x20)	Magnet/reed timer running

Keys

This column lets you add CSV files with AES keys to LansenConfigurator, allowing your dongle to decrypt the information passing through it. Press **Load/add keys** and select your CSV file. **Clear keys** will clear ALL keys added to the configurator. This does NOT add keys to your device which is later saved! Furthermore, this is not saved to your dongle either, so the keys will have to be uploaded every time you connect to LansenConfigurator.

The format for the CSV file is:

```
Serialnumber;AESKey
00000001;XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
```

The Xs represent the AES key found on our website, www.lansenonline.com.

Meters	Routed By	Columns	Keys
ID	Key		
00160660	4A CA 80 06 DF 80 5F 28 38 82		
00160661	21 4D 8B EB C6 97 90 B5 90 34		
00160662	65 00 26 9B 87 CD 51 E3 F9 FE		
00160663	93 09 B1 58 D6 E3 89 50 9F 5A		

(How it looks in the sniffer once the keys have been added)

Logging data to file

Log to file: ☐

The

Sniffer allows the user to log the received packets in the program onto a file on the computer. To do this, follow the steps below:

1. Click in the checkbox so it is marked. This will enable the button **Browse**.
2. Click on the button **Browse** and navigate to a place on your computer where you want to save the file. Give the file a name in the field called *File name* and click on **Save**. This will activate the button **StartLogging**.
3. Click on the button **Start logging**. The program will now save all packets with all columns shown in the *primary list*.