
DATA FORMAT

Wireless MBus bridge to mioty with following options

B, BE – Battery, Extended battery

A1/A2 – Indoor/Outdoor

LR – Long Range amplifier/filter

Internal antennas (no X) / SMA-connector for external antennas (X)



Verify correct device and version

This document applies to our bridge LAN-WMBUS-B4-MIOTY with protocol version 30 (0x1E). There are two ways of finding out the protocol version of the device; either by looking at the label on the device or by looking at the data packets sent out by the device. See chapters **Protocol version in data packets** and **Protocol version on label** below for more information.


Protocol version in data packets

If it is possible to check the information in the data packets sent out by the device, then the protocol version is included in the data field called *A-Field Protocol version*, see below.

Protocol version on label

The protocol version can be found on the label. An example of a label is shown in the figure below and the relevant information is described by LAS.00112233.32.1E, where:

- **Manufacturer code:** LAS
- **Serial number:** 00112233
- **Device type:** 32
- **Protocol version:** 1E

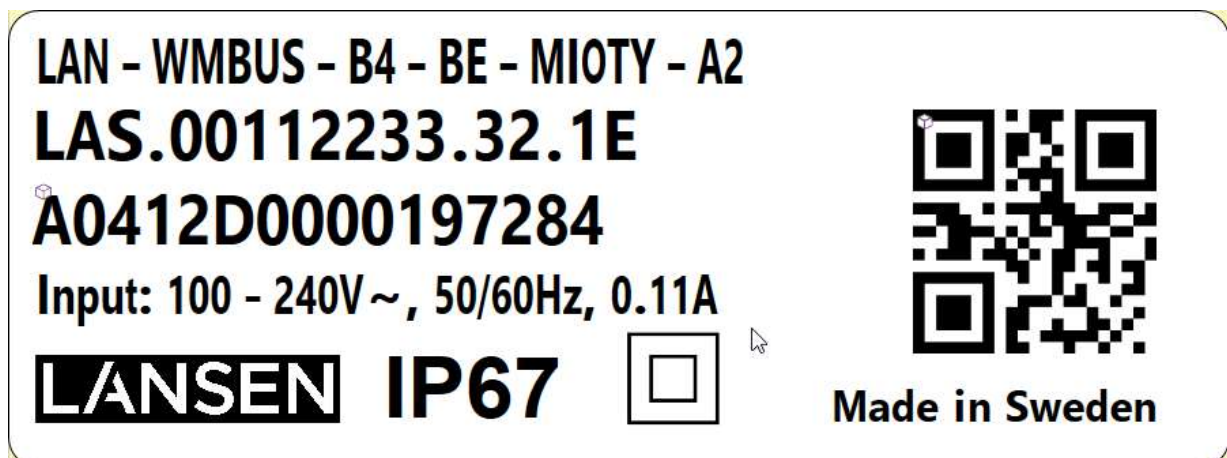

Status Packet

A status packet contains information and settings about the bridge. The packet is sent at regular intervals.

A status packet is sent:

- Every 12 hours over the Mioty interface.
- Over mioty on every new bootup.
- Every minute over the wM-Bus interface (default in C mode, frame format A).

| | |
|------|---|
| DR1 | Number of total messages transmitted over mioty since power up. Excluding status packets. |
| DR2 | Used routing slots (maximum 2000) whitelist devices. |
| DR3 | Software version of bridge |
| DR4 | Is the bridge listening now? 0x01=Yes, 0x00=NO) |
| DR5 | Time to mode change (Listen to Sleep or Sleep to Listen). |
| DR6 | Value on parameter " <i>Listen timer</i> " NOTE> This value need sto be nmultiplied by 10 to get number of seconds |
| DR7 | Value on parameter " <i>Pause timer</i> " (value 0 here means that the Bridge will always listen) |
| DR8 | Shows which weekday(s) bridge is listening. |
| DR9 | Value on parameter " <i>Start time</i> ", shown as minutes after midnight (-1=Not used) |
| DR10 | Suppression timer setting |
| DR11 | Current time |
| DR12 | Current battery level. Battery level is always 5000 for mains version. |
| DR13 | Estimated power left in battery (Months). |
| DR14 | Total bytes sent over the mioty link |
| DR15 | Number packet waiting to be transmitted when the first transmission period since status message ended. It is expected that this number is 0 when if enough long transmission period to transmit the messages. |
| DR16 | Number devices not being received during latest listen period of the one in routing list. |
| DR17 | Number of listen period omitted since there was messages to be send out in the que. |
| DR18 | Model LR/Battery |
| DR19 | Hardware version. |
| DR20 | On time days since powerup |
| DR21 | Seconds the WMBUS radio has been in listen mode (operating time). |
| DR22 | Current temperature (TBI) |

| Byte | Field Name | Content | Info | Byte data | |
|------|---------------|-------------------------|-----------------------------------|-----------|---|
| 1 | L-Field | Length | | | Data link layer |
| 2 | C-Field | SND-NR | | 0x44 | |
| 3 | M-Field | Manufacturer code | LAS | 0x33 | |
| 4 | M-Field | Manufacturer code | | 0x30 | |
| 5 | A-Field | Serial number (LSB) | Example: 00112233 | 0x33 | |
| 6 | A-Field | Serial number | | 0x22 | |
| 7 | A-Field | Serial number | | 0x11 | |
| 8 | A-Field | Serial number (MSB) | | 0x00 | |
| 9 | A-Field | Protocol version | | 0x1E | |
| 10 | A-Field | Unidirectional Repeater | | 0x32 | |
| 11 | CI-Field | Short header | | 0x7A | Short transport layer |
| 12 | Access no. | Transmission counter. | Example: 7 | 0x07 | |
| 13 | Status | Errors and alerts | See Table 1 for more information. | 0x00 | |
| 14 | Configuration | | | 0x00 | |
| 15 | Configuration | | | 0x00 | |
| 16 | AES-Verify | Encryption Verification | | 0x2F | |
| 17 | AES-Verify | Encryption Verification | | 0x2F | |
| 18 | DR1 | DIF | 32-bit integer | 0x04 | Number of total messages transmitted over mioty since power up. Excluding status packets. |
| 19 | | VIF | Extension table | 0xFD | |
| 20 | | VIFE | Cumulative counter | 0x61 | |
| 21 | | Value (LSB) | | 0x00 | |
| 22 | | Value | | 0x00 | |
| 23 | | Value | | 0x00 | |
| 24 | | Value (MSB) | | 0x00 | |
| 25 | DR2 | DIF | 16-bit integer | 0x02 | Used routing slots |
| 26 | | VIF | Manufacturer specific | 0xFF | |
| 27 | | VIFE | | 0x01 | |
| 28 | | Value (LSB) | | 0x00 | |
| 29 | | Value (MSB) | | 0x00 | |
| 30 | DR3 | DIF | 16-bit integer | 0x02 | Software version of the bridge |
| 31 | | VIF | Extension table | 0xFD | |
| 32 | | VIFE | Version | 0x0F | |
| 33 | | Value (LSB) | | 0x00 | |

| | | | | | |
|----|------|-------------|---|------|--|
| 34 | | Value (MSB) | | 0x00 | |
| 35 | DR4 | DIF | 8-bit integer | 0x01 | Is the bridge listening now? (1=Yes, 0=NO) |
| 36 | | VIF | Manufacturer specific | 0xFF | |
| 37 | | VIFE | Listen status | 0x02 | |
| 38 | | Value | | 0x01 | |
| 39 | DR5 | DIF | 32-bit integer | 0x04 | Seconds to mode change (seconds) |
| 40 | | VIF | Manufacturer specific | 0xFF | |
| 41 | | VIFE | Seconds to mode change (seconds) | 0x04 | |
| 42 | | Value (LSB) | | 0x00 | |
| 43 | | Value | | 0x00 | |
| 44 | | Value | | 0x00 | |
| 45 | | Value (MSB) | | 0x00 | |
| 46 | DR6 | DIF | 16-bit integer | 0x02 | Value on parameter "Listen timer" (seconds / 10) |
| 47 | | VIF | Manufacturer specific | 0xFF | |
| 48 | | VIFE | Listen timer | 0x05 | |
| 49 | | Value (LSB) | | 0x00 | |
| 50 | | Value (MSB) | | 0x00 | Value on parameter "Pause timer" (seconds / 10) |
| 51 | DR7 | DIF | 16-bit integer + Storage 1 | 0x42 | |
| 52 | | VIF | Manufacturer specific | 0xFF | |
| 53 | | VIFE | Pause timer | 0x05 | |
| 54 | | Value (LSB) | | 0x00 | |
| 55 | | Value (MSB) | | 0x00 | Which weekdays the gateway is listening |
| 56 | DR8 | DIF | 8-bit integer | 0x01 | |
| 57 | | VIF | Manufacturer specific | 0xFF | |
| 58 | | VIFE | | 0x08 | |
| 59 | | Value | Note: See Table 2 for more info | | Value on parameter "Start time" Shown as minutes after midnight. |
| 60 | DR9 | DIF | 16-bit integer | 0x82 | |
| 61 | | DIFE | Storage 2 | 0x01 | |
| 62 | | VIF | Manufacturer specific | 0xFF | |
| 63 | | VIFE | Start Time (minutes) | 0x05 | |
| 64 | | Value (LSB) | | 0xFF | |
| 65 | | Value (MSB) | | 0xFF | Suppression timer setting |
| 66 | DR10 | DIF | 16-bit integer + Extension/Storage | 0xC2 | |
| 67 | | DIFE | Storage 3 | 0x01 | |

| | | | | | |
|-----|------|--------------|------------------------------|------|-----------------------|
| 68 | | VIF | Manufacturer specific | 0xFF | |
| 69 | | VIFE | | 0x05 | |
| 70 | | Value (LSB) | Example: 30 minutes | 0x1E | |
| 71 | | Value (MSB) | | 0x00 | |
| 72 | DR11 | DIF | 48-bit integer | 0x06 | Current time |
| 73 | | VIF | Time Type I format | 0x6D | |
| 74 | | Current Time | Example: 2001-01-01 00:01:02 | 0x02 | |
| 75 | | Current Time | | 0x01 | |
| 76 | | Current Time | | 0xC0 | |
| 77 | | Current Time | | 0x01 | |
| 78 | | Current Time | | 0x01 | |
| 79 | | Current Time | | 0x00 | |
| 80 | DR12 | DIF | 16-bit integer | 0x02 | Current battery level |
| 81 | | DIFE | Extension table | 0xFD | |
| 82 | | VIF | Voltage (mV) | 0x46 | |
| 83 | | Value (LSB) | | 0x00 | |
| 84 | | Value (MSB) | | 0x00 | |
| 85 | DR13 | DIF | 16-bit integer | 0x02 | |
| 86 | | VIF | Extension table | 0xFD | |
| 87 | | VIFE | Extension table | 0xFD | |
| 88 | | VIFE | Remaining battery months | 0x02 | |
| 89 | | Value (LSB) | | 0x00 | |
| 90 | | Value (MSB) | | 0x00 | |
| 91 | DR14 | DIF | 32-bit integer | 0x84 | |
| 92 | | DIFE | Subunit 1 | 0x40 | |
| 93 | | VIF | Extension table | 0xFD | |
| 94 | | VIFE | Cumulation counter | 0x61 | |
| 95 | | Value (LSB) | | 0x00 | |
| 96 | | Value | | 0x00 | |
| 97 | | Value | | 0x00 | |
| 98 | | Value (MSB) | | 0x00 | |
| 99 | DR15 | DIF | 16-bit integer + storage 1 | 0x42 | |
| 100 | | VIF | Extension table | 0xFD | |
| 101 | | VIFE | Cumulation counter | 0x61 | |

| | | | | | |
|-----|------|-------------|------------------------------------|------|------------------|
| 102 | | Value (LSB) | | 0x00 | |
| 103 | | Value (MSB) | | 0x00 | |
| 104 | DR16 | DIF | 16-bit integer | 0x02 | |
| 105 | | VIF | Manufacturer specific | 0xFF | |
| 106 | | VIFE | Meter missing data | 0x09 | |
| 107 | | Value | | 0x00 | |
| 108 | | Value | | 0x00 | |
| 109 | DR17 | DIF | 16-bit integer + Extension/Storage | 0xC2 | |
| 110 | | DIFE | Storage 3 | 0x01 | |
| 111 | | VIF | Extension table | 0xFD | |
| 112 | | VIFE | Cumulation counter | 0x61 | |
| 113 | | Value | | 0x00 | |
| 114 | | Value | | 0x00 | |
| 115 | DR18 | DIF | 8-bit integer | 0x01 | Hardware Model |
| 116 | | VIF | Extension table | 0xFD | |
| 117 | | VIFE | Model/Version | 0x0C | |
| 118 | | Value | 4 | 0x04 | |
| 119 | DR19 | DIF | 8-bit integer | 0x01 | Hardware Version |
| 120 | | VIF | Extension table | 0xFD | |
| 121 | | VIFE | Hardware Version | 0x0D | |
| 122 | | Value | 1 | 0x01 | |
| 123 | DR20 | DIF | 16-bit integer | 0x02 | |
| 124 | | VIF | On time days | 0x23 | |
| 125 | | Value (LSB) | | | |
| 126 | | Value (MSB) | | | |
| 127 | DR21 | DIF | 32-bit integer | 04 | |
| 128 | | VIF | Operating time seconds | 0x24 | |
| 129 | | Value (LSB) | w-MBUS radio listen operating. | | |
| 130 | | Value | | | |
| 131 | | Value | | | |
| 132 | | Value (MSB) | | | |
| 133 | DR22 | DIF | 8-bit integer | 0x01 | |
| 134 | | VIF | External temperature 1 °C | 0x67 | |
| 135 | | Value | | 0x21 | |

Table 1: Explanation of status bits used by the battery driven gateways

| Bit | Info |
|----------|-------------|
| 0 (0x01) | X |
| 1 (0x02) | X |
| 2 (0x04) | Low battery |
| 3 (0x08) | X |
| 4 (0x10) | X |
| 5 (0x20) | X |
| 6 (0x40) | X |
| 7 (0x80) | X |

Table 2: Bit representation for days when gateway is listening

| Bit | Info |
|----------|-----------|
| 0 (0x01) | Sunday |
| 1 (0x02) | Monday |
| 2 (0x04) | Tuesday |
| 3 (0x08) | Wednesday |
| 4 (0x10) | Thursday |
| 5 (0x20) | Friday |
| 6 (0x40) | Saturday |
| 7 (0x80) | NOT USED |